



## Operator Manual 900 GTS Series



S.N. 163501 –

**DRYAIR Manufacturing Corp.**  
400 Service Road, PO Box 126  
St. Brieux, SK, Canada  
S0K 3V0  
Tel: (306) 275-4848 1-888-750-1700  
Fax: (306) 275-4664



## Table of Contents

1. Warranty Policies & Claim Procedures	
1-7	
Warranty Policies .....	1-7
Basic Warranty Policy .....	1-7
Extended Warranty Policy .....	1-7
Exceptions to the Warranty Policies .....	1-7
Owner Obligations .....	1-8
Manufacturer Obligations .....	1-8
Warranty Claim Procedure .....	1-9
2. Safety Concerns	
2-1	
General Safety Guidelines .....	2-1
Water Heater Module .....	2-1
Heat Transfer Fluid .....	2-1
Fluid Handling Precautions .....	2-1
First Aid Measures .....	2-1
3. Components	
3-1	
Central Mobile Enclosure .....	3-1
Passive Heat Transfer .....	3-2
Circulation Line Heat Exchangers .....	3-2
Hose Reel .....	3-2
Accessories .....	3-2
Mixing/Booster Pump .....	3-2
Optional Remote Manifold .....	3-3
Insulated Line Jackets .....	3-3
Portable Heat Exchanger .....	3-3
How the System Works .....	3-4
4. Setup (CME)	
4-1	
Required Safety Clearances .....	4-1
Elevation Concerns .....	4-2
Electrical Requirements & Connections .....	4-2
900 GTS Electrical Connection ( <i>figure 10</i> ) .....	4-3
Heat Transfer Fluid “HTF” .....	4-3
Heat Transfer Fluid Specifications .....	4-3
Fuel .....	4-4
Primary “HTF” Circulation Lines .....	4-4
Burner Removal .....	4-5
Burner Installation .....	4-5

5. Operation (CME)	
5-1	
Purging Air from the “HTF” Circulation System .....	5-1
Before Firing the System.....	5-2
Cold Start Procedure .....	5-3
Temperate Start Procedure .....	5-5
Control Settings .....	5-5
Initiate Firing .....	5-5
Purging Air from the Fuel System .....	5-7
Adding “HTF” to System.....	5-8
6. Setup/Operation (HR2250)	
6-1	
Manual Controls.....	6-1
Reel Power .....	6-1
Reel Direction Modes .....	6-1
Mechanical Drive Components.....	6-2
Electric Motor .....	6-2
.....	6-2
Gear Box .....	6-3
Torque Limiter Clutch .....	6-3
7. Troubleshooting (CME)	
7-1	
No Power at Outgoing Side of Water Heater Toggle Switch .....	7-1
No Power at Terminal #4 on Low Water Cut Off .....	7-1
No Power at Flow Switch .....	7-1
No Power at Aquastat .....	7-2
No Power at Outgoing Side of High Limit Switches.....	7-2
No Power at Burner .....	7-3
8. Maintenance	
8-1	
Central Heating Module.....	8-1
Daily Checklist.....	8-1
Seasonal Checklist .....	8-1
HR2250 .....	8-4
Precautions.....	8-4
Manual Resets.....	8-5
Electric Motor .....	8-5
Torque Limiter Adjustment .....	8-5
Gear Box .....	8-7
9. Appendix	
9-1	

Important Operation Information .....	9-1
Non-Pressure Vessel .....	9-1
Heater Specifications.....	9-1
Electrical Schematic .....	9-2
Heat Transfer Fluid Preheater Information .....	9-5
Function .....	9-5
Pros of Using HTF Preheater:.....	9-5
Cons of Not Using HTF Preheater:.....	9-5
In Conclusion:.....	9-6
Material Safety Data Sheets .....	9-7

Figure 1- 900 GTS Central Mobile Enclosure (side view).....	3-1
Figure 2-900 GTS Central Mobile Enclosure (back view).....	3-1
Figure 3-Hose Reel .....	3-2
Figure 4-Mixing/Booster Pump .....	3-2
Figure 5-Optional Remote Manifold & Fluid Circulation Lines .....	3-3
Figure 6-Portable Heat Exchangers .....	3-3
Figure 7-Central Heating Module (CHM - Propane, Natural Gas or Diesel Fired) or Steam Plate Heat Exchanger .....	3-4
Figure 8-900 GTS Top View .....	4-1
Figure 9-900 GTS Side View .....	4-2
Figure 10-900 GTS Electrical Hook up (230VAC).....	4-3
Figure 11-Glycol/Water Mixture Chart .....	4-4
Figure 12-Riello Burner .....	4-5
Figure 13-Oil Supply & Return Lines .....	4-5
Figure 14-Riello Burner Tube & Mounting Bracket .....	4-5
Figure 15-Supply & Return Isolation Valve in the Open Position .....	5-1
Figure 16-Automatic Air Vent.....	5-1
Figure 17-Pump, Water Heater & Flow Reverser Switch .....	5-1
Figure 18-HTF Sight Glass.....	5-2
Figure 19-System Pressure Gauge .....	5-2
Figure 20-Supply & Return Isolation Valves in the Closed Position.....	5-2
Figure 21-Fuel Return Valve .....	5-3
Figure 22-Fuel Return Valve .....	5-3
Figure 23-900 GTS Control Panel .....	5-3
Figure 24-900 GTS Breaker Box .....	5-4
Figure 25-Supply Temperature Gauge.....	5-4
Figure 26-Combustion Air & Fuel Temperature Gauges .....	5-4
Figure 27-900 GTS Control Panel .....	5-5
Figure 28-Supply Temperature Gauge.....	5-5
Figure 29-Circulation Valve Position .....	5-6
Figure 30-Return Temperature before Bypass Gauge .....	5-6
Figure 31-Pump & Water Heater Switch.....	5-7
Figure 32-Fuel Line Valves in the Fuel System .....	5-7
Figure 33-Riello Burner and Fuel Pressure Gauge.....	5-8
Figure 34-Fill/Drain Hose and Plug.....	5-8
Figure 35-Supply Valve (open and closed) .....	5-8
Figure 36-Fill/Drain Ball Valve (open and closed) .....	5-9
Figure 37-900 GTS Control Panel Pump Switch.....	5-9
Figure 38-Glycol Level Gauge .....	5-9
Figure 39-Power & Mode Toggle Switches .....	6-1
Figure 40-Foot Switch .....	6-1
Figure 41-Access Door .....	6-2
Figure 42-Marathon Electric Motor.....	6-2

Figure 43-Electric Motor Features & Data .....	6-2
Figure 44-Hub City Gear Box.....	6-3
Figure 45-Model 350 Torque Limiter.....	6-3
Figure 46-Heat Exchanger Breakdown.....	8-2
Figure 47-Back Washing Y-Strainer .....	8-3
Figure 48-Y-Strainer Screen .....	8-4
Figure 49-Marathon Electric Motor.....	8-5
Figure 50-Torque Limiter Adjustment.....	8-6
Figure 51-Torque Limiter Assembly .....	8-6
Figure 52-Gear Box .....	8-7
Figure 53-Serial Number/Specification Label 900 GTS .....	9-1
Figure 54-900 GTS Electrical Schematic .....	9-2
Figure 55-HR2250 Electrical Schematic .....	9-3
Figure 56-Trailer Wiring Schematic.....	9-4
Figure 57-HTF Preheater .....	9-5

# 1. Warranty Policies & Claim Procedures

DRYAIR MANUFACTURING CORP. (referred to within as DRYAIR) warrants its new, unused equipment to be free of defects in material and workmanship at the time of delivery to the original retail purchaser.

## Warranty Policies

### Basic Warranty Policy

- DRYAIR will repair or replace, at its option without charge, any defective part of the equipment for a period of twelve (12) months from delivery to the first retail purchaser, F.O.B St. Brieux, SK., Canada.
- Any parts that are covered by an extended warranty published by DRYAIR are an exception to the Basic Warranty Policy and are to be warrantied as per the details of the Extended Warranty Policy.
- Labour is covered as per DRYAIR flat labour rate.
- The Warranty Policy, terms and conditions, may change from time to time without prior notice.
- Warranty terms and conditions are transferable in the event of the sale to a second owner.
- Replacement parts will be warrantied for 90 days from the repair date. Bill of sale must accompany the warranty claim.
- The terms of this Warranty Policy are subject to provincial and state legislation. DRYAIR reserves the right to make modifications in accordance with provincial and state legislation without prior notice or obligation.

### Extended Warranty Policy

- An extended warranty is available on the heat exchanger unit of the water heater assembly. The available warranty for a part, under the extended warranty policy, is prorated by 20% per year.
- Shipment date is the date to be used for the commencement of the warranty period.
- Coverage schedule
  - Year 1 - 100%
  - Year 2 - 80%
  - Year 3 - 60%
  - Year 4 - 40%
  - Year 5 - 20%

### Exceptions to the Warranty Policies

- Under no circumstance shall the owner be entitled to recover costs for incidental, special or consequential damages such as, but not limited to: loss of profit or revenue, other commercial losses, inconvenience and/or replacement equipment rental cost.
- Maintenance, repair or service items not related to warrantable defects
- Loss or damage during shipping
- Failure resulting from lack of or improper maintenance



- Damage caused by operator abuse, negligence or improper operation
- Damage resulting from improper voltage supply
- Damage from improper installation (installation done by someone other than the manufacturer)
- Non-defective items replaced at the request of the customer
- Damage due to accidents
- Damage resulting from improper fuel supply (i.e. pressure or contamination)
- Damage resulting from cracked or broken lines occurring during transport
- Damage resulting from use of inadequate or improper fluids (i.e. glycol or oil)
- Mileage is not covered
- Glycol is considered a consumable and will not be covered under the warranty policy.
- Generators carry their own warranty coverage through their own manufacturer. Please refer generator issues to the OEM. Contact information may be found in the Service & Operator Manual under Optional Equipment.

### **Owner Obligations**

- It is the responsibility of the owner, at the owner's expense, to transport the equipment to the service facility of an authorized DRYAIR distributor/dealer or alternately to reimburse the distributor/dealer for any traveling expenses incurred in fulfilling this warranty.
- It is the responsibility of the owner to read, understand, and implement the maintenance, safety, and operational guidelines as laid out in the Operation and Maintenance Guide.
- All parts are to be tagged with a warranty claim number and shipped prepaid to DRYAIR within 30 days.

### **Manufacturer Obligations**

- DRYAIR reserves the right to continually improve the product's parts or specifications at any time without notice or obligation.

## Warranty Claim Procedure

- All warranty credits must be processed with the DRYAIR Warranty Claim Form.
- All warranty parts, unless otherwise specified, are to be returned to DRYAIR along with a completed Warranty Claim Form.

*Note: Prior to returning warranty parts, please call for an authorization number and shipping instructions from the Warranty Department in Canada.*

Location of Warranty Depot:

**DRYAIR Manufacturing Corp.**  
**400 Service Road, PO Box 126**  
**St. Brieux, SK, Canada**  
**S0K 3V0**  
**Ph. 1 (888) 750-1700**

- Each warranty claim should only refer to one Serial or Production Schedule numbered unit.
- Warranty parts are to be tagged with a warranty claim number.
- When claiming for warranty labour, the allowable warranty labour rate will be \$65.00/hour. The factory reserves the right to adjust the number of hours claimed where deemed necessary.
- The factory may at times specify allowable labour for certain warranty procedures.
- Mileage and travel time to and from the customer are not eligible for warranty credit.
- Freight charges for warranty parts are not eligible for warranty credit.
- Labour flat rates for component changes:
  - Electrical Components - 0.5hr
    - Relays
    - Switches
    - Thermostats
    - Breakers
  - Electric Motor Changes - 1hr
    - Hose Reel
  - Plumbing Components - 1hr
    - Flow Reverser
    - Flow Switch
    - Valves
  - Glycol Pump Changes - 2hrs

*Note: Other labour charges will be at the discretion of DRYAIR*

## 2. Safety Concerns

### General Safety Guidelines

- Make certain that the operator reads and understands all the information in this manual.
- All unauthorized people must be kept away from the equipment when in operation.
- Maintain instructional and safety decals. Replace damaged decals.
- All guards must be in place when the equipment is in operation.

### Water Heater Module

*\*CAUTION! The water heater is a heating appliance.\**

- When dealing with any heating appliance, observe all posted warnings and cautions.
- Keep children and pets away from all piping and fuel accessories.
- The water heater housing panels must be kept closed when the system is operating. This prevents drafts from affecting the water heater operation.

### Heat Transfer Fluid

Follow the following precautions and measures when working with “Heat Transfer Fluid” (“DOWFROST\*HTF” & BOSS CHILL PG”).

#### Fluid Handling Precautions

- Ventilation.....Good general ventilation should be sufficient for mist conditions.
- Respiratory Protection. No respiratory protection should be needed.
- Skin Protection.....For brief contact, no precautions other than clean body-coverings clothing should be needed.
- .....Use impervious gloves when prolonged or frequently repeated contact should occur.
- Eye Protection.....Use safety glasses.

#### First Aid Measures

- Eyes.....Flush eyes with plenty of water.
- Skin.....Wash off in flowing water or shower.
- Ingestion.....Induce vomiting if large amounts are ingested.  
.....Consult medical personnel.
- Note to physician.....No specific antidote.  
.....Supportive care.  
.....Treatment based on judgement of the physician in response to reaction of the patient.



*Note: For complete “heat transfer fluid” information, refer to the Material Safety Data Sheets for “Dowfrost HTF” & “Boss Chill PG” at the end of this manual.*

## 3. Components

### Central Mobile Enclosure

- A compact and portable design.
- Easy access from rear and side doors.
- Automatic temperature control and fuel usage which respond to work site demands.
- Low pressure atmospherically vented circulation system. No special boiler certification is required to operate the system.
- Circulation system “automatic air vent” component for quick setup-and-go operation.
- A central heating module control center which monitors and controls system operations.
- A multi-light system operation feature for easy system trouble shooting.
- Flow-reversing “Green Thaw” system.



Figure 1-900 GTS Central Mobile Enclosure (side view)



Figure 2-900 GTS Central Mobile Enclosure (back view)

## Passive Heat Transfer

### Circulation Line Heat Exchangers

The circulation line heat exchangers are the perfect solutions for:

- Heating and/or thawing cold or frozen ground.
- Frost prevention.
- Concrete curing and heating in subzero environments.

This system can be applied to all types of concrete applications. Circulation line heat exchangers can be secured directly against the surface of the concrete or concrete forms. Alternately, an expendable circulation line can be incorporated into the concrete structure during the pour. Thus the slab floor can continue being heated to provide radiant floor heat during construction.

### Hose Reel

- The onboard hose reel comes with 3000ft of 5/8" I.D. circulation line heat exchanger hose. The onboard hose reel (HR-2250) can hold up to 4000ft of the 5/8" I.D. circulation line heat exchanger.
- The reel provides convenient storage for the "circulation line heat exchanger" hose required for thawing and/or concrete curing.
- The electric drive system provides "power on" or "power off" capability.
- A torque-limiting device provides breaking.
- The onboard reel comes with an integral 6-port manifold and a pair of 1 1/2" quick connections to accommodate a remote manifold.



Figure 3-Hose Reel

## Accessories

### Mixing/Booster Pump

The multifunctional mixing/booster ensures maximum flexibility in the use of this system.

- Tempering mode supplies lower temperature fluid for concrete cure and radiant floor heat applications eliminating the need to reduce the water heater operating temperatures below safe operating ranges.
- When operating in booster mode, the system can increase flow rates or function as a pumping station to increase pumping distances by over 300 feet per station.




Figure 4-Mixing/Booster Pump

- The system also allows for dual temperature control. High temperature fluid can be provided to portable heat exchangers, along with a lower temperature fluid for concrete cure and radiant floor heat applications.

### Optional Remote Manifold

The multifunctional mixing/booster ensures maximum flexibility in the use of this system.

- Allows for additional distribution and/or separation between the central heating trailer and the manifold.

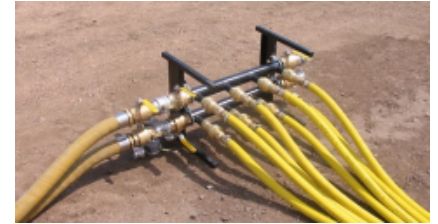

*Figure 5-Optional Remote Manifold & Fluid Circulation Lines*

### Insulated Line Jackets

Insulated circulation line jackets are also available. These insulated jackets will prevent exposed circulation line heat loss in extreme subzero conditions.

### Portable Heat Exchanger

Portable heat exchangers are the ideal way to heat and/or dry enclosed structures. Their compact and mobile design allows them to be positioned where required on the job site. The efficient fan/coil design provides a high rate of heat transfer. High volume fans then deliver this heat evenly throughout a large area. The clean, low relative humidity heat delivery minimizes energy costs by eliminating the need to draw in fresh outside air. With this system, you just reheat warm internal air rather than heating cold external air.



*Figure 6-Portable Heat Exchangers*

## How the System Works

The system uses a low pressure, open fluid loop distribution system with an atmospherically vented fluid reservoir. A central heating module warms the heat transfer fluid. This heated fluid is pumped through a distribution system loop, passing through heat exchangers in remote locations.

Two types of exchangers are available:

- Portable heat exchangers include a heat transfer coil, fan and thermostatic temperature control.

- Circulation line heat exchangers use flexible hose with hydraulic style quick couplers for ease of hookup. Heat transfer occurs by direct contact heat transfer and radiant heat conduction.

The mixing/booster unit can be utilized to:

- Provide lower temperature fluid for concrete cure and radiant floor heat applications.
- Provide dual temperature control with a single fluid circulation system.
- Boost fluid flow and increase pumping distances.

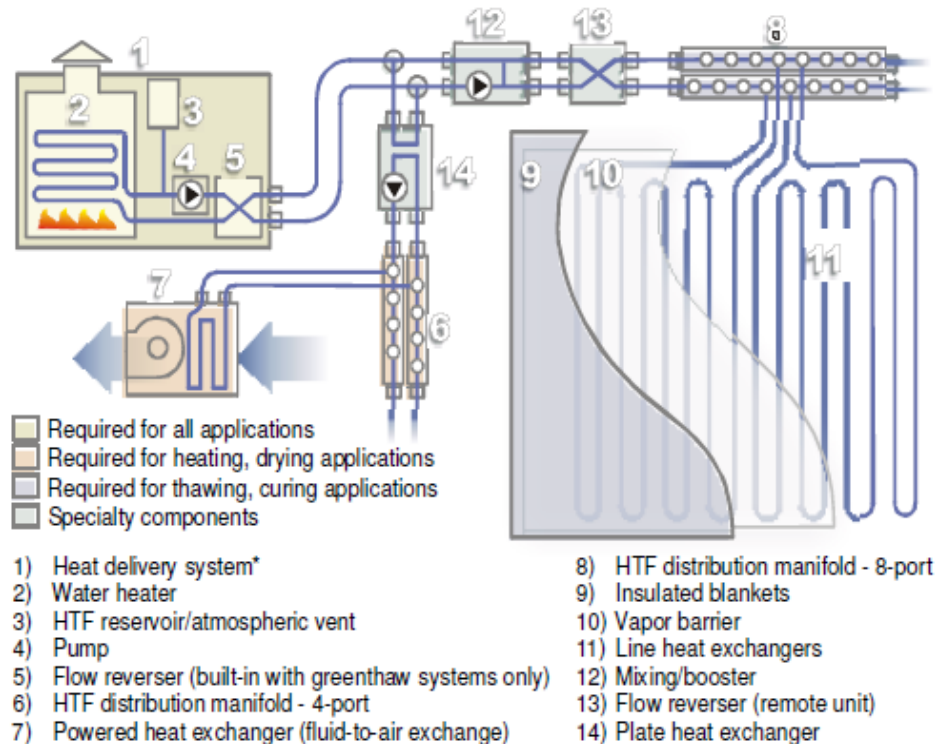


Figure 7-Central Heating Module (CHM - Propane, Natural Gas or Diesel Fired) or Steam Plate Heat Exchanger



## 4. Setup (CME)

The positioning of all the system components on the site will be influenced by several factors. Please read all the “Setup” section before beginning.

Be sure to observe all local electrical codes and fire regulations when positioning the central heat module.

### Required Safety Clearances

The 900 GTS is a heating appliance, therefore safe

heat and exhaust clearances must be observed from combustible materials and for service access.

- Maintain 24” (61cm) of clearance on all sides of the unit *figure 8 (1-1)*.
- Maintain 36” (91cm) of clearance *figure 9 (2-1)* on all sides of the flue pipe and chimney cap.

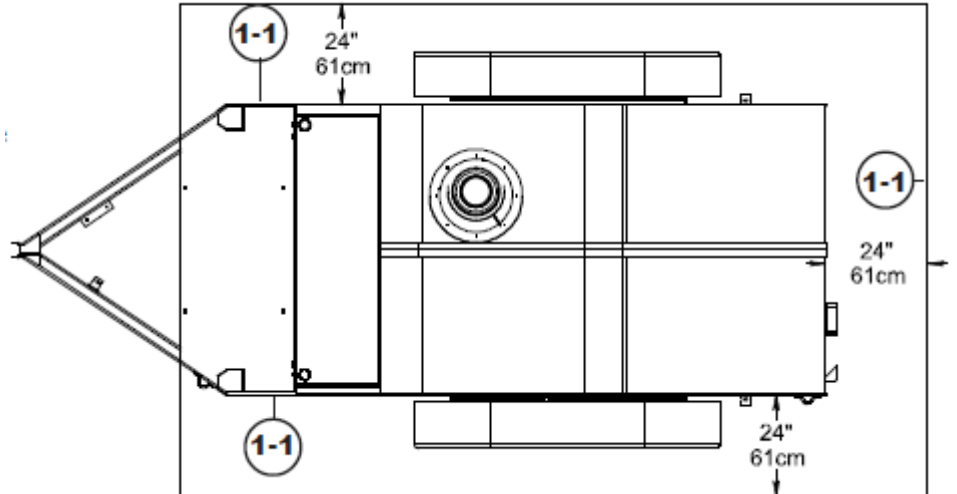


Figure 8-900 GTS Top View

## Elevation Concerns

Do not place any “portable heat exchangers” or “circulation line heat exchangers” higher than the top-level *figure 9 (2-2)* of the heat transfer fill tank. If this is not observed, the following can occur:

- **Insufficient fluid in the system.**

Fluid will drain back to the heat transfer fill tank from the over elevated fluid lines when the pump is shut off. The heat transfer fill tank will show adequate fluid but when the pump is started, extra fluid

will be required to recharge the over elevated fluid lines and portable heat exchangers. The system will then have insufficient fluid in the reservoir.

- **Fluid Overflow**

If fluid is added to maintain proper fluid levels while the pump is running, overflow at the fill tank will occur when the pump is shut off. This would occur because of drain back from the over elevated fluid lines.

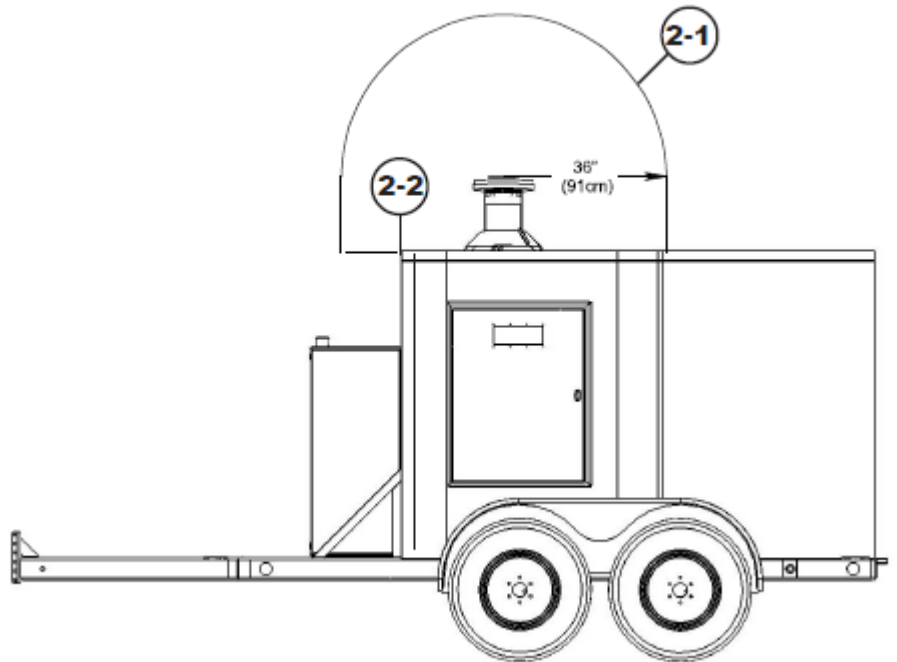


Figure 9-900 GTS Side View

## Electrical Requirements & Connections

When determining the “central mobile enclosure” location on site, consider setting up near the electrical power supply.

*Note: This applies mainly to systems not equipped with a dedicated generator.*

- The 900 GTS’s main feed wiring must be adequately sized to carry the minimum ampacity shown on the water heater cabinet’s rating label. All electrical connections, connectors and wire must be CSA/UL compliant and installed according to local law and codes.
- Before making any electrical connections, be sure that the electrical power supply is “Off”.

### 900 GTS Electrical Connection (figure 10)

- The 900 GTS requires 115/230VAC power. The module is factory wired so that the only connection to be made is a 115/230VAC service outlet.
- The main feed wiring must be adequately sized to carry minimum ampacity shown on the water heater cabinet's rating label.
- All electrical connections, connectors and wire must be CSA/UL approved and installed according to local laws and codes.
- A 4-wire hook up *figure 10* (3-1) is required to work properly. Warranty is void if the wiring hook up is not done correctly.

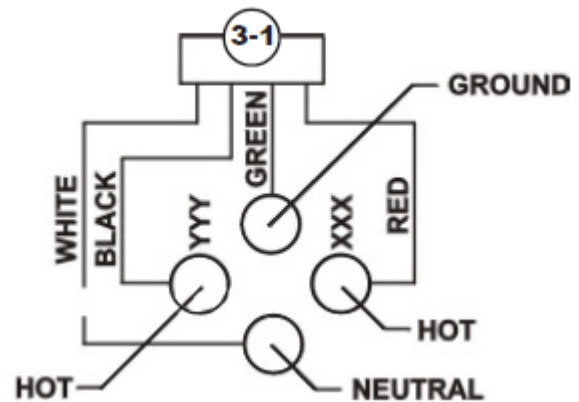


Figure 10-900 GTS Electrical Hook up (230VAC)

## Heat Transfer Fluid “HTF”

**\*CAUTION!** At no time, should you use automobile antifreeze in your system. The use of automobile antifreeze will void your warranty.\*

- The heat transfer fluid “HTF” level should show no more than  $\frac{1}{4}$  on the gauge (cold fluid) at start up. As the “HTF” warms to operating temperature, fluid expansion will raise the level to  $\frac{1}{2}$  or  $\frac{3}{4}$  on the gauge (depending on the total volume of fluid in the circulation system).

### Heat Transfer Fluid Specifications

- The system is shipped with the pre-mixed “HTF”, made up of 50% “Dowfrost® HTF” or “Boss Chill PG” and 50% water\*, by weight - freeze protection down to -28°F (-33°C).
- The glycol/water mixture chart below *figure 11* will provide you with more information on the proper mixture.
- “Dowfrost® HTF” or “Boss Chill PG” must be used. The pure “Dowfrost® HTF” or “Boss Chill PG” heat transfer fluid used in the system is made up of a blend of 95-97% Propylene glycol, <5% Dipotassium phosphate and deionized water (see Safety Concerns section - MSDS sheets for additional information).

- Soft water with a neutral pH level (#7) must be used.

***\*CAUTION!** Whenever coupling or uncoupling quick couplers, make sure that the isolation valves are closed and the pump is off. Failure to do so may put you at risk of injury from eye and/or skin exposure to hot glycol.\**

Percent Propylene Glycol		Freezing Point	
By Mass	By Volume	°F	°C
0.0	0.0	32.0	0.0
10.0	9.6	26.1	-3.2
20.0	19.4	17.9	-7.8
30.0	29.4	6.7	-14.0
40.0	39.6	-8.1	-22.3
50.0	49.9	-28.9	-33.8
60.0	60.0	-54.9	-48.3

Figure 11-Glycol/Water Mixture Chart

## Fuel

- Only clean #1 or #2 diesel fuel or light heating oil is suitable for use in the system.
- The central heating module comes equipped with its own tank, so there are no fuel line hook ups required.
- The fuel system utilizes a two-piece system to ensure efficient fuel supply to the burner.

*Note: Contact your local fuel supplier to inform them of the requirements.*

## Primary “HTF” Circulation Lines

- If possible, position the primary circulation lines out of high traffic areas.
- If primary “HTF” circulation lines are required, connect the primary circulation lines to the manifold “supply” and “return” quick couplers at the back of the central mobile enclosure. Quick couplers are attached to both ends of the primary circulation lines to enable quick coupling. This also allows the isolation of the primary while retaining the “HTF” in the lines. Plus, set up and dismantling of the circulation system is much quicker.

## Burner Removal

To remove an existing **Riello model 40-F20 Diesel/Light Oil Burner**, use the following sequence:

1. Make certain that the power supply to the central heating module is disconnected.
2. Disconnect the electrical connection to the burner by disconnecting the #1, #2 and green/yellow wires attached to the control box *figure 12 (6-1)* on the burner assembly. Slip the water tight connection *figure 12 (6-2)* from the burner chassis, located in the bottom right corner of the burner assembly.
3. Disconnect the oil supply hose *figure 13 (7-1)* and oil return hose *figure 13 (7-2)* by unscrewing the fuel connections on the burner side. The loose supply and return hose ends should be plugged and pushed aside out of the way inside the cabinet. Mark hoses for correct reconnection.
4. Remove the fuel pressure line *figure 12 (6-3)* from the burner fuel pump.
5. Remove 2 bolts *figure 14 (8-1)* from top of burner tube bracket.
6. Pull burner toward you and away from the mounting bracket *figure 14 (8-2)*.

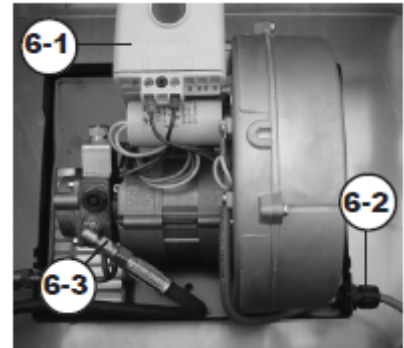


Figure 12-Riello Burner

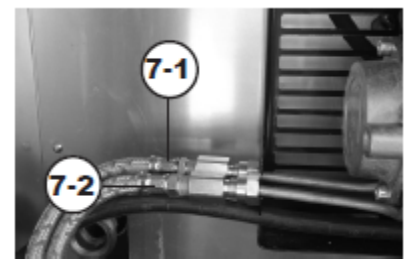


Figure 13-Oil Supply & Return Lines

## Burner Installation

To install a **Riello model 40-F20 Diesel/Light Oil Burner**, use the following sequence:

1. Insert burner into the mounting bracket *figure 14 (8-2)*.
2. Install 2 bolts *figure 14 (8-1)* at top of the burner tube bracket.
3. Connect the oil supply hose *figure 13 (7-1)* and oil return hose *figure 13 (7-2)* by coupling them to the quick connections on the side of the burner. Insure hoses are attached to the correct connectors.
4. Connect the fuel pressure line *figure 12 (6-3)* to the burner fuel pump.
5. Connect the electrical connection to the burner by connecting the #1, #2 and the green/yellow wires to the control box on the burner assembly *figure 12 (6-1)*. Once the wires have been reconnected, slip the water tight connection *figure 12 (6-2)* into the burner chassis located in the bottom right corner of the burner assembly.

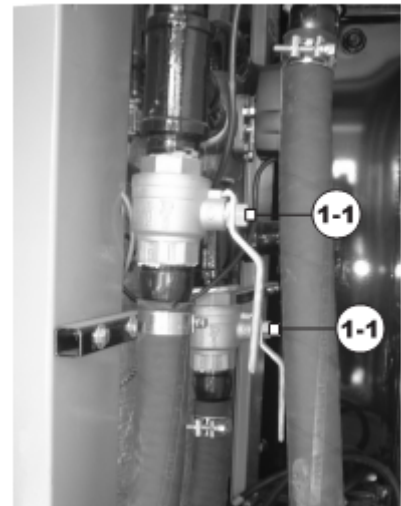


Figure 14-Riello Burner Tube & Mounting Bracket

## 5. Operation (CME)


### Purging Air from the “HTF” Circulation System

- Verify that the primary circulation lines are connected to a distribution manifold.
- Complete the connection for one heat exchanger loop or portable heat exchanger. This will close the circulation loop and allow circulation.
- Verify that the “supply” and “return” isolation valves *figure 15*(1-1) and the isolation valves at both ends of the primary circulation lines (hard connection to the manifold) are in the “open” position.



*Figure 15-Supply & Return Isolation Valve in the Open Position*

- The automatic air vent *figure 16* (2-1) valve cap *figure 16* (2-2) should not need adjustment. The valve cap should be open 1 ½ turns (counter clockwise) from fully closed to allow air escape from the “HTF” system.

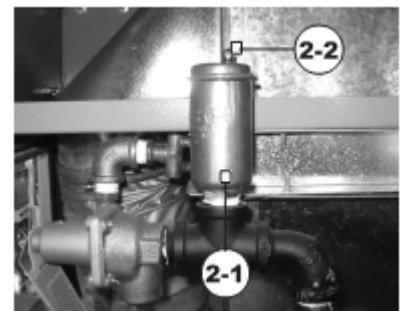

*Figure 16-Automatic Air Vent*

- Toggle the pump switch *figure 17* (3-1) to the “On” position and run the pump. This will release the air from the system.



*Figure 17-Pump, Water Heater & Flow Reverser Switch*

- Monitor the “HTF” sight glass *figure 18* (4-1) and make sure that the “HTF” stays between ¼ to ½ full at all times.
- Note that there may be a certain amount of air in the system. “HTF” levels may change as air is displaced from the system. Add “HTF” fluid to maintain ¼ to ½ levels when the fluid is cold.



*Figure 18-HTF Sight Glass*


- When the air is eliminated, the System Pressure Gauge *figure 19* (5-1) will hold at a steady reading of between 15 to 40 P.S.I.



*Figure 19-System Pressure Gauge*


## Before Firing the System

- Verify that the power supply is correct and that the electrical hook up is as specified in “Setup”.
- Verify that the water heater is being supplied with the same fuel type as indicated on the water heater data plate “LIGHT OIL/DIESEL FUEL”.
- Verify that the “supply” and “return” isolation valves *figure 20* (6-1) are closed.

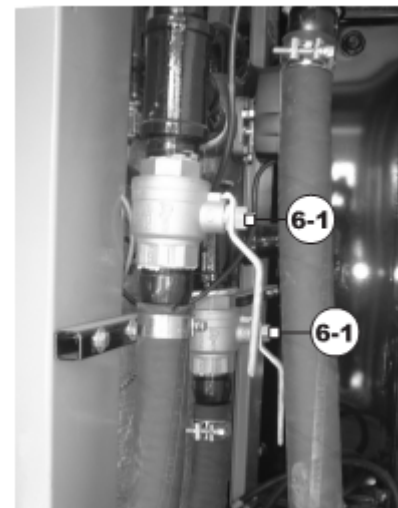

*Figure 20-Supply & Return Isolation Valves in the Closed Position*

- Verify that the fuel line valves *figure 21 (7-1)* and *figure 22 (8-1)* are in the positions as shown to the right.
- Verify that the “HTF” level gauge *figure 18 (4-1)* shows approximately  $\frac{1}{4}$  full.

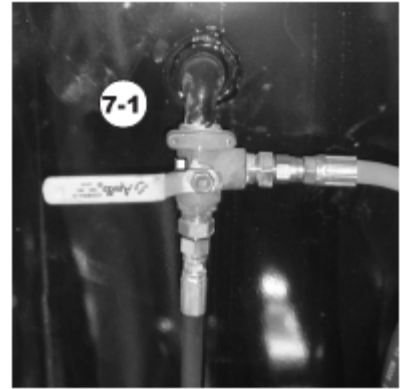

*Figure 21-Fuel Return Valve*



*Figure 22-Fuel Return Valve*

## Cold Start Procedure

**This procedure must be completed if the ambient outdoor air temperature is lower than 50°F (10°C).**

Consider initiating this process well in advance of firing the system.

*Note: In -30°F (-34°C) conditions, this process could take up to 6 hours.*

- The system has a built in electric “cold start” fluid preheater which will heat the “HTF” in the water heater heat exchanger.
- Confirm that the pump switch *figure 23 (9-1)* and the water heater switch *figure 23 (9-2)* are in the “Off” (down) position.



*Figure 23-900 GTS Control Panel*



- Position all for breakers *figure 24* (10-1) to the “On” (up) position. This will automatically energize the electric “cold start” circulation heater.
- Wait until the “supply temperature gauge” *figure 25* (11-1) reads between 140°F to 150°F (60°C to 65°C). The time required for the “HTF” in the heat exchanger to reach this temperature will depend on the outdoor ambient temperature.
- Toggle the pump switch *figure 23* (9-1) located on the control panel to the “on” (up) position. Once the pump is turned on, the “cold start” fluid preheater is automatically shut off.
- With the pump on and the “supply” and “return” isolation valves on the exterior of the heat module in the closed position, the “HTF” will circulate through the heat module’s internal bypass system. This will supply warm “HTF” to the combustion air and fuel preheat systems, which tempers combustion air and fuel for smoother burner start up and operation.
- Continue circulating the “HTF” within the heat module’s distribution system until the “combustion air gauge” *figure 26* (12-2) and the “fuel temperature gauge” *figure 26* (12-1) read approximately 60°F to 70°F (15°C to 21°C).



Figure 24-900 GTS Breaker Box



Figure 25-Supply Temperature Gauge

*Note: The time required for the combustion air and fuel to reach this temperature will again depend on the outdoor ambient air temperature.*

- The burner is now ready to be fired. Proceed with the “Temperate Start Procedure”.

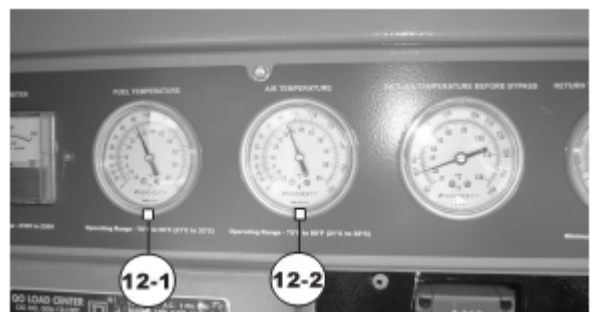


Figure 26-Combustion Air & Fuel Temperature Gauges

## Temperate Start Procedure

You can proceed with this procedure when:

1. The ambient outdoor temperature is above 50°F (10°C).
2. The “cold start procedure” has been complete.

### Control Settings

#### Low Flow Situations

Utilizing only one 80 or 200 portable heat exchanger or only one or two circulation line exchanger loops.

- Water heater heat exchanger temperature over run can be expected, therefore initially set the aquastat *figure 27* (13-1) at 140°F (60°C) and the high limit switch *figure 27* (13-2) at 200°F (93°C).



Figure 27-900 GTS Control Panel

*Note: A single line heat exchanger loop may not have enough flow to activate the system flow switch. If this occurs, consider adding another loop of hose to increase flow and activate the system.*

#### High Flow Situations

Utilizing two or more portable heat exchangers or three or more circulating line heat exchanger loops.

- Set the aquastat *figure 27* (13-1) at 190°F (88°C) and the high limit switch between 200°F-210°F (93 C-99°C).

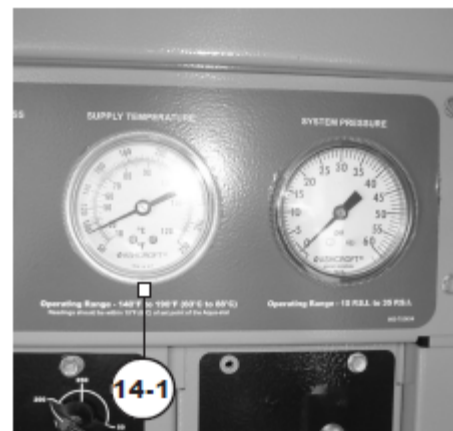


Figure 28-Supply Temperature Gauge

### Initiate Firing

- Verify that the pump switch *figure 27* (13-3) is in the “On” (up) position.
- Toggle the water heater switch *figure 27* (13-4) to the “On” (up) position.
- The burner will proceed through its firing sequence.
- Once the burner is operating smoothly and the system pressure is steady (air has been eliminated from the system), monitor the supply temperature *figure 28* (14-1) until it is within 10°F of the aquastat temperature setting *figure 28* (14-1).

- Verify that only one heat exchanger loop or one portable heat exchanger is connected to the primary lines through the distribution manifold.

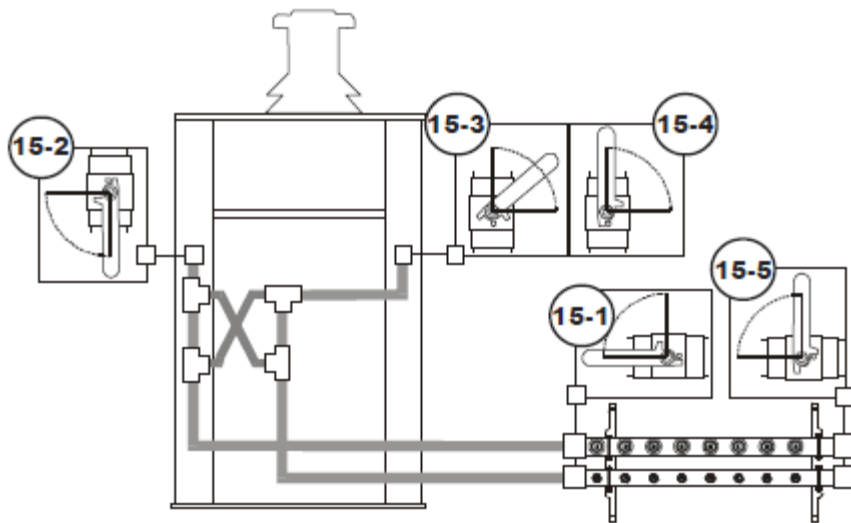


Figure 29-Circulation Valve Position

- This will close the loop and allow circulation from the “supply” side to the “return” side of the primary circulation line.
- Open fully the “supply” isolation valves *figure 29* (15-2).
- Open fully the “return” primary circulation line valve *figure 29* (15-3).
- Open the “return” isolation valve *figure 29* (15-4) to the half open position.
- The half open position will ensure a slow introduction of cold “HTF” into the external circulation system and prevent a cold shock of the system.

*Note: Do not close this valve more than the ½ closed position. The restricted flow may prevent the firing of the water heater.*

- Incrementally open the “return” isolation valve *figure 29* (15-4) to a full open position.
- Monitor the return temperature before bypass gauge *figure 30* (16-1). Before fully connecting more heat exchanger loops or portable heat exchangers, this gauge must show a noticeable rise in temperature indicating the “HTF” has made the full circuit. With heat exchanger loops, this may take 10 minutes or more.

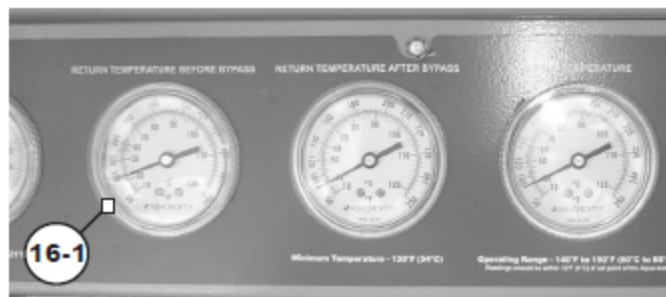


Figure 30-Return Temperature before Bypass Gauge

- Repeat the previous steps until all portable heat exchangers or heat exchanger loops are connected and circulating.

## Purging Air from the Fuel System



If the burner does not fire, the fuel system may have to be purged of air.

- Confirm that there is an adequate fuel supply.
- Toggle the water heater switch *figure 31* (17-2) to the “Off” (down) position.



Figure 31-Pump & Water Heater Switch

- Open all manual valves in the fuel system. Set the 3-way fuel bypass valve *figure 32* (18-1) for full diversion to the tank (handle straight up and down). Set valve *figure 32* (18-2) to the “Open” position.

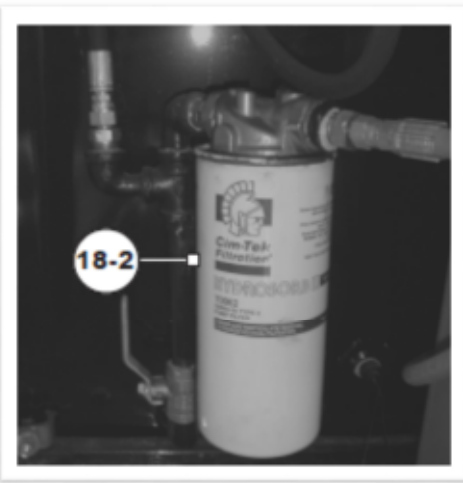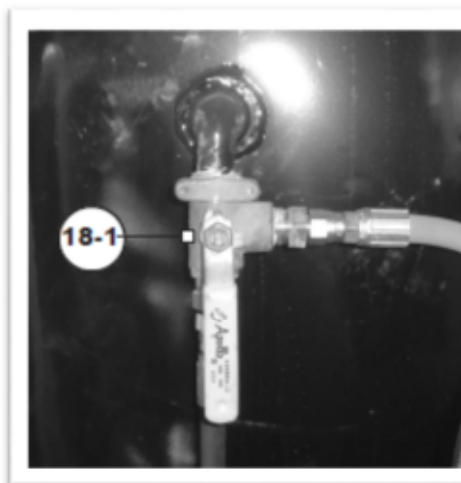

- Confirm the pump switch *figure 31* (17-1) is in the “on” (up) position.
- Toggle the water heater switch *figure 31* (17-2) to the “On” (up) position.
- Depress the reset button *figure 33* (19-1). This will activate the fuel pump and burner firing sequence.
- When the fuel system is primed, the fuel pressure gauge *figure 33* (19-2) will show a steady reading and the water heater should attempt to ignite.


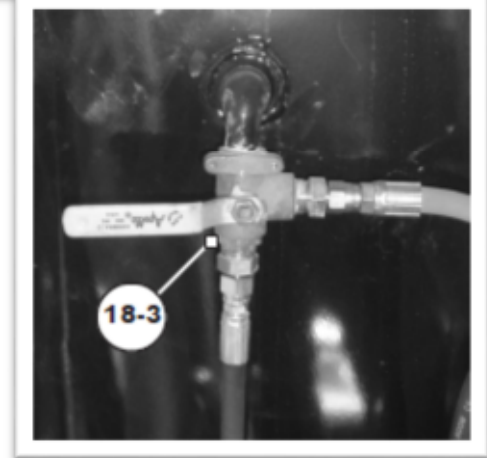


Figure 32-Fuel Line Valves in the Fuel System

*Note: The reset process can be tried up to six times at the most. If the water heater does not fire, see the accompanying “Water Heater Module – Service Manual” or the “Riello Burner Installation Manual” for information and/or contact Technical Support.*

- Once the water heater has ignited and the fuel pressure has stabilized, set the 3-way fuel bypass valve *figure 32* (18-3) to the two pipe fuel system position (horizontal position).

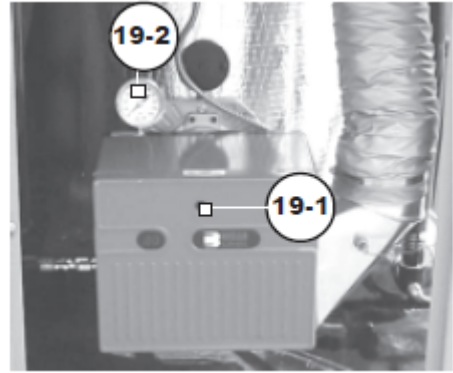


*Figure 33-Riello Burner and Fuel Pressure Gauge*

## Adding “HTF” to System


Verify that the power supply is correct and the electrical hook up is as specified in “Setup”.

- Ensure all breakers are in the “On” position.
- Remove fill/drain hose plug *figure 34* (20-2) from the fill/drain house *figure 34* (20-1).
- Submerge the fill/drain hose into the bottom of the barrel/pail or jug or pre-mixed “HTF” (see “Setup” for “HTF” specification).

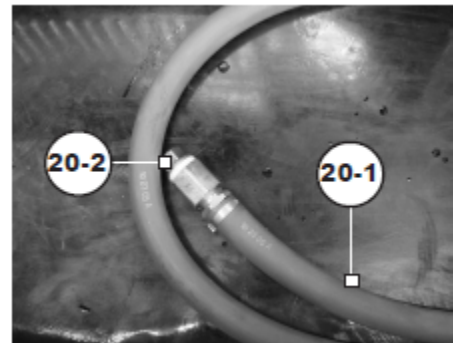

*Figure 34-Fill/Drain Hose and Plug*

- Turn the supply ball valve *figure 35* (21-1) to the “Closed” position.
- Turn the fill/drain ball valve *figure 36* (22-2) to the “Open” position.
- Toggle the pump switch *figure 37* (23-2) to the “On” (up) position.

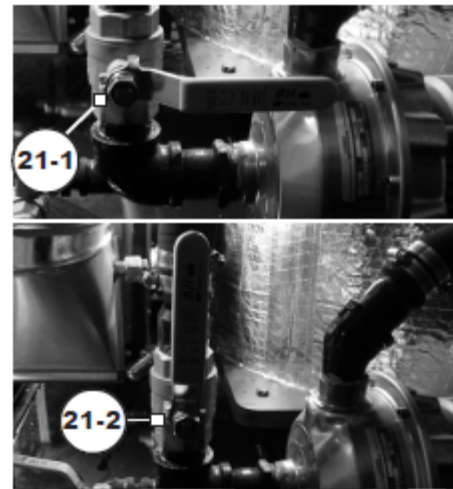

*Figure 35-Supply Valve (open and closed)*


- Once the pump switch is in the “On” position, the pump will commence to draw the “HTF” into the system. By watching the glycol level gauge *figure 38 (24-1)*, continue to fill the system until the glycol level gauge shows ½ full.

*Note: Caution must be taken when approaching the ½ full mark as it could take **2-3 seconds** to register the actual level once the pumping has ceased. In the case of an overfull situation, do the following:*


- Toggle the pump switch *figure 37(23-1)* to the “Off” (down) position.
- Verify that the fill/drain ball valve *figure 36 (22-2)* is in the “Open” position.
- Turn the supply ball valve *figure 35 (21-2)* to the “Open” position. Gravity will **immediately** drain the glycol out of the system through the fill/drain hose. The fill/drain hose should be submerged into a barrel, pail or jug with sufficient room for the “HTF”.

Once the desired amount of “HTF” has been removed and the glycol level is showing ½ full, turn the supply valve (21-1) to the “Closed” position and continue with the following procedures:

- Turn the fill/drain ball valve *figure 36 (22-2)* to the “Closed” position.
- Toggle the pump switch *figure 37 (23-1)* to the “Off” (down) position.
- Turn the supply ball valve *figure 35 (21-2)* back to the “Open” position.

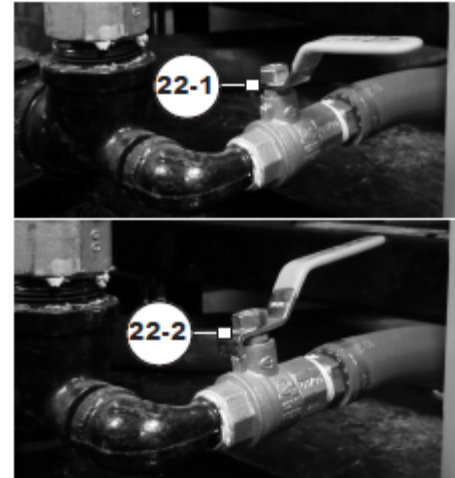

*Figure 36-Fill/Drain Ball Valve (open and closed)*

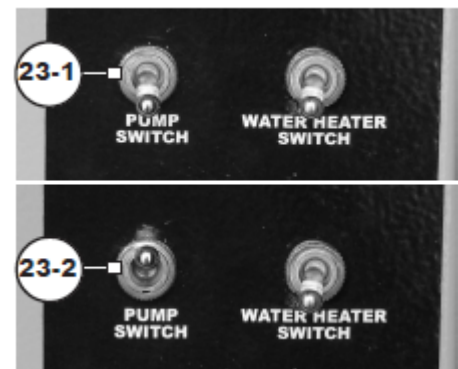

*Figure 37-900 GTS Control Panel Pump Switch*



*Figure 38-Glycol Level Gauge*

## 6. Setup/Operation (HR2250)

***\*DANGER!*** It is very important that you read and understand this section before operating the hose reel. Failure to follow the procedures and cautions in this manual could lead to injury or death!\*

### Manual Controls

The Hose Reel has a manual method of controlling the spool rotation UNLOAD/LOAD and a general ON/OFF power switch.

***\*CAUTION!*** When NOT operating the reel, put the reel speed toggle switch figure 39 (1-1) in the “Off” position to prevent accidental activation and possible injury. When the hose reel is to be left unsupervised, the power cord should be unplugged from the power supply.\*

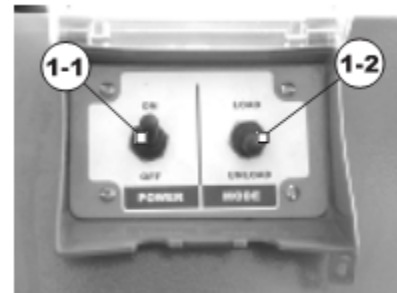


Figure 39-Power & Mode Toggle Switches

### Reel Power

Power is present when the power switch figure 39 (1-1) is in the “On” position. By connecting the foot switch you can load or unload hose by depressing the foot switch figure 40 (2-1) which is momentary (will only operate when depressed).

### Reel Direction Modes

- **Mode 1** – UNLOAD
- **Mode 2** – LOAD

***\*CAUTION!*** Take care not to allow your hands, feet or clothing to become trapped by any of the reel’s moving mechanisms.\*

### Mode 1 – UNLOAD

- The UNLOAD mode is achieved with the mode toggle switch figure 39 (1-2) in the UNLOAD position.
- The foot switch (2-1) is momentary and will only operate when it is depressed.



Figure 40-Foot Switch

## Mode 2 – LOAD

- The LOAD mode is achieved with the mode toggle switch *figure 39* (1-2) in the LOAD position.
- The foot switch *figure 40* (2-1) is momentary and will only operate when it is depressed.
- The hose must be directed manually into position on the hose reel.

*Note: To eliminate initial clutch slippage when loading hose, one loop of hose should be left slack prior to initiating hose loading.*

## Mechanical Drive Components

Access to the internal mechanical drive components is through the access door. This door must be removed.

### Electric Motor

- The electric motor used to drive the reel is manufactured by Marathon Electric.
- No regular maintenance is required.
- Low temperature manual reset thermal protector.
- Totally enclosed and full gasket construction for dirty environments.
- Make sure that during operation or storage, the motor is not in prolonged contact with moisture.
- Refer to the chart *figure 43 Electric Motor Features & Data* below for motor data.



*Figure 41-Access Door*



*Figure 42-Marathon Electric Motor*

PRODUCT FEATURE - ENCLOSED HIGH TORQUE MOTOR			
Model Number:	56C17F5913	Phase:	1
HP:	3/4	Mult. Symb.	F1
RPM:	1725	F.L. Amps	11/5.4-5.5
Volts:	115/208-230	Wght. Lbs.	30
Frame:	56C	"C" Dim.	12.32
Overload:	MANUAL	Foot Notes:	2
Mounting:	C-FACE	S.F.:	1.15

*Figure 43-Electric Motor Features & Data*



## Gear Box

### Gear Box Specifications

- HUB CITY – Poweratio 2000, Model HW2042ER (Assy # 0251-00534)
- Modified helical worm reducer
- 102:1 gear reduction
- 5/8” input shaft size
- 1” output shaft

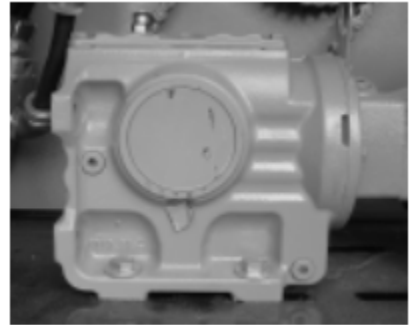


Figure 44-Hub City Gear Box

**\*CAUTION!** Do not operate the unit without insuring it contains the correct amount of oil. Do not overfill or under fill with oil. Injury to personnel, unit or other equipment may result. Oil should be changed with greater frequency if unit is used in severe environment (dusty or high humidity).\*

**\*WARNING!** Oil housing and other components can reach high temperatures during operation, and can cause severe burns. Use extreme care when removing lubrication plugs and vents while servicing the unit.\*

See “Maintenance – Gear Box” section of the operators manual for Hub City Gear Box oil filling procedures, service & maintenance.

### Torque Limiter Clutch

- The torque limiter protects the drive line from damage due to overload conditions. The driven center member slips on non-asbestos friction discs during overload situations in the drive line.
- Torque Ratings:  
GLI Model 350w/ two springs  
-minimum: 60lb-ft  
-maximum: 190lb-ft

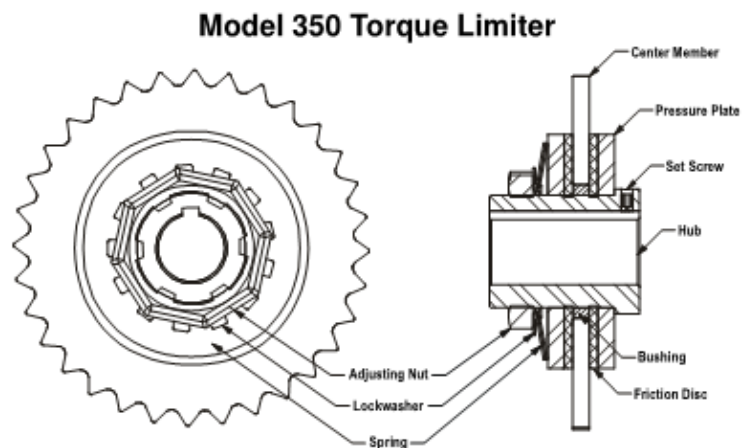


Figure 45-Model 350 Torque Limiter

*Note: The torque ratings are estimates. Actual torque capacity may vary significantly depending on many factors. Field conditions such as oil, humidity, water and temperature as well as frequency and duration of slippage all effect torque capacity.*

Although the torque limiter clutch is factory set a DRYAIR, periodic adjustment may be required. It is recommended the torque setting of the clutch be checked twice per season (see “Maintenance” section). With prolonged use, the friction disks located on either side of the A-plate sprocket will eventually show wear.


- It is important that the torque limiter clutch is adjusted properly. If the clutch slips too easily, the spool will take too long to stop and hose will pile up on the reel. If the clutch does not slip at all, damage will occur to the drive system.

*Note: A visual check may be required to confirm whether it is the clutch that is slipping or the motor.*

See “Maintenance – Torque Limiter Adjustment” section of the operators manual for Torque Adjustment & Run-In Procedure.

## 7. Troubleshooting (CME)

 
- There are 6 green lights on the control panel which indicate the status of a sequence of functions while the unit is running.
- Aquastat and burner lights go off and on as the burner cycles.
- When the burner is on, all green lights should be on. With the burner on, any light which is not on should be considered burned out.
- Trouble shoot power issues at the control panel control strip. Remove control panel to expose terminal strip.



### No Power at Outgoing Side of Water Heater Toggle Switch

Check for 120 volt power between letter N and #1 on the terminal strip. If no power, check the following:

 
- Check that the circuit breaker for the water heater has not been switched off.
- Check that the toggle switch for the water heater has not been turned off.
- Check for power in and out of breaker and toggle switches.
- Check that the correct power supply has been connected to the unit. Investigate power source and be certain that the power characteristics are correct. (115/230 volt, 30 amp, single phase, 4-conductor, 0'-100'-10 AWG, over 100'-8 AWG).



### No Power at Terminal #4 on Low Water Cut Off

Check for 120 volt power between letter N and #2 on the terminal strip. If no power, check the following:

 - Low water situation. Check fluid level in tank and add if necessary.
- Check fuse in low water cut off. Replace if required.



### No Power at Flow Switch

Check 120 volt power between letter N and #3 on the terminal strip. If no power, check the following:

 
- Pump not running. Check pump breaker and toggle switch on control panel. Check for 230 volts at pump motor. If correct power is confirmed at motor, but pump won't run refer to "G&L Pumps, Installation, Operation & Maintenance Instructions, Troubleshooting Chart" for more in depth troubleshooting.
  - Inadequate flow.
- Check that all valves are open in the fluid transfer loop. Filter screen may be plugged. Use flush hose/valve attachment into a bucket, while pump is running for a quick Y-Strainer flush (see Y-Strainer flush in Maintenance section of Operators Manual). Eventually the system may have to be drained and the filter screen removed

and cleaned by hand (see Y-Strainer in Maintenance section of Operators Manual). Check that pressure bypass valve is open if fluid receiving units are closed off.

- When performing “ground thaw” or “concrete curing” application, the use of only one “heat exchanger loop” may result in inadequate flow. Utilizing at least two “heat exchanger loops” will provide adequate flow. A short bypass loop can also be incorporated to correct this situation.
- Air present in the circulation system can cause cavitation in the pump and pressure loss. Refer to “Operation, Purging Air from the System” for purging instructions.
- Supply temperature over run causing vaporization (steam) and pump pressure to be lost. Cavitation will occur in the “Water Heater Heat Exchange” causing a noticeable bubbling and pooping sound. Check the “overflow outlet” to confirm presence of fluid vapor. If vaporization is occurring, the “aquastat” setting is too high. Reset the “aquastat” to a lower temperature (10°F increments) and allow cool down. When the “HTF” cools down, the system will regain pump pressure. Allow the burner to cycle back on and observe to ensure that the vaporization situation does not reoccur. If it does reoccur, reset the “aquastat” to a lower temperature until the problem is rectified.

*Note: This situation will occur more often in a “low flow” situation (refer to Operation, Temperate Start Procedure, Control Settings).*


- c) Defective Flow Switch. If a) and b) check out good, the flow switch will need to be recalibrated or replaced.



**No Power at Aquastat**

Check for 120 volt power between letter N and #6 on terminal strip. If no power, check the following:

 
- a) Check setting on aquastat.
- b) Check sensor and verify that it is intact in its well.
- c) If a) and b) check out good, replace both aquastat and sensor.



**No Power at Outgoing Side of High Limit Switches**

Check for 120 volt power between letter N and #5 on the terminal switch. If no power, check the following:

 - a) Manual reset high limit reset button tripped.
- b) Check settings of switches. The automatic high limit should be set a 10°F higher than the set point of the aquastat, and the manual reset high limit should be set 10°F higher than the automatic high limit switch.
- c) Determine which high limit switch is defective and replace.



**No Power at Burner**

Check for 120 volt power between letter N and #7 on the terminal strip. If no power, check the following:

- a) Check for 120 volt power at the burner. If power present there is a fault in the burner. See the enclosed Riello Burner information to trouble shoot the burner system.

## 8. Maintenance

### Central Heating Module

#### Daily Checklist

A daily inspection of the water heater cabinet should be performed with attention being paid to the following:

#### Check for Strong Gas Odor

- If a leak or the odor of fuel is notice, immediately turn off all power switches and main fuel supply to the water heater cabinet.
- Ventilate the water heater cabinet.
- Find and correct the leak before turning on any power or trying to relight the water heater.

#### Check HTF Level Everyday

- Maintain between  $\frac{1}{4}$  and  $\frac{3}{4}$  on the “HTF” level gauge when fluid is hot.
- Top up as necessary.
- For “HTF” specifications, see “Setup, Heat Transfer Fluid, HTF, Fluid Specifications”.
- For “HTF” handling precautions, refer to the “Safety Concerns, Material Safety Data Sheet”.
- If loss of fluid is excessive, check for leaks at all fittings and connections in the water heater cabinet as well as the fluid circulation system.

#### Check the Supply Temperature Gauge

- Verify that the supply temperature gauge is within 10°F of the aquastat setting.

#### Seasonal Checklist

##### Fuel (water block/particulate) Filter

- The water block/particulate filter should be changed every heating season or as required.

##### Hoses

- Periodically check all hoses for damage due to aging, elevated temperatures, over torqued hose clamps and abrasion and weathering.
- Replace damaged hoses as required.
- Seasonally check hose clamp torque and adjust accordingly.

## Water Heater Heat Exchanger

- Keep the flues in the water heater clean. Soot is a non-conductor of heat. A dirty water heater requires more oil to heat a structure than a clean one. Water heaters can corrode on the fireside. The results from corrosive substances in the fuel can be difficult to control. Some fuel oils contain substances, which can cause fireside corrosion. Sulphur, vanadium and sodium are among the materials that may contribute to this problem. The probability of trouble from this source depends to a large degree on the amount of Sulphur in the fuel and on the care used in cleaning the fireside heating surfaces. This is particularly true when preparing a boiler for a period of idleness. Preventing this problem also depends on keeping the boiler heating surfaces dry when a boiler is out of service.
- The person responsible for water heater maintenance should be certain that the fireside surfaces of the water heaters in his care are thoroughly cleaned at the end of the firing season. He should also observe the fireside surfaces during the firing season and if signs of corrosion are discovered, a reputable consultant should be contacted.
- The flue pipe and chimney cap should be taken off once a year and thoroughly cleaned of all soot.

## Heat Exchanger Cleaning Procedure

- Remove the burner from the water heater *figure 46 (1-1)*.
- Remove the plate *figure 46 (1-2)* from the bottom of the water heater.
- Remove the refractory board *figure 46 (1-3)* from the water heater by reaching into the burner hole and lightly tapping the board with your hand until it drops down.
- Remove the flue collar *figure 46 (1-4)* to expose the burner tubes *figure 46 (1-5)*.
- Remove all flue baffles *figure 46 (1-6)*.
- Clean burner tubes *figure 46 (1-5)* with a steel round brush or a rag on a piece of rod.
- Vacuum all debris.

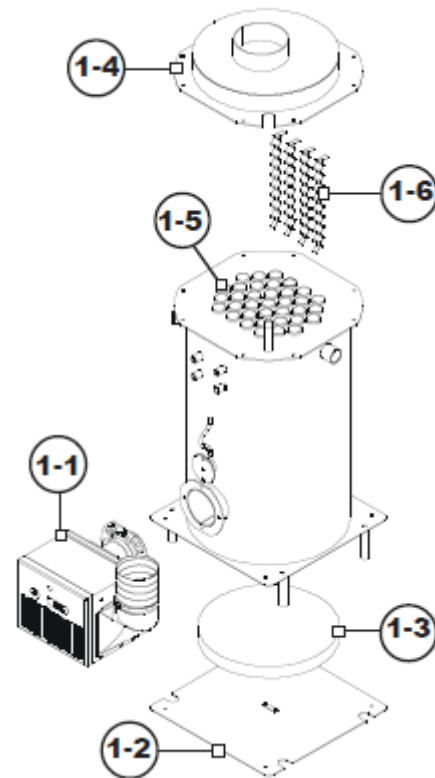


Figure 46-Heat Exchanger Breakdown

## Heat Transfer Fluid “HTF”

- A clean properly maintained hot water system should not be drained unless there is a possibility of freezing, the boiler has accumulated a considerable amount of sludge or dirt on the water side or draining is necessary to permit repairs. Very little sludge should accumulate in a water heater where little make up water is added and where an appropriate water heater water treatment is maintained at proper strength.
- The “HTF” should be tested from year to year for freeze protection and should be strong enough for your area. The “HTF” should be checked with a refractometer. Check the Glycol/Water mixture chart (see “Setup, Heat Transfer Fluid “HTF”) for mixing ratios.
- The “pH level” of the “HTF” requires an annual check to see if the pH level is neutral. The pH level should be at #7. This should be checked with a pH instrument. (See “Setup, Heat Transfer Fluid, “HTF” for heat transfer fluid specification.)

## Burner

- For burner seasonal maintenance, see the “Service Manual”.

## Y-Strainer

### Y-Strainer Flush

- The Y-Strainer *figure 47 (2-1)* requires regular maintenance every time the system is set up or at 1000 hours of operation.
- Remove the end plug from the end of the strainer outlet valve.
- Position a 5 gallon container at the outlet valve.
- With the pump running, crack the strainer valve a number of times. A quick on/off action of the valve will provided the short bursts required to backwash and clean the strainer. The removal of a couple of gallons of “HTF” should be adequate.



*Figure 47-Back Washing Y-Strainer*

*Note: Do not run the reservoir empty as this would allow air to enter the system.*

- The extracted “HTF” can be reused. Before pouring the fluid back into the reservoir, the fluid must be filtered to remove impurities. Filtering the fluid through a cotton cloth or paper is adequate.



## Y-Strainer Screen Cleaning Procedure

- Clean the screen *figure 48 (3-1)* located inside the Y-Strainer prior to every installation.
- Remove the end plug from the end of the strainer outlet valve.
- Position a container at the outlet valve. A couple of 5 gallon containers should do.
- With the pump “off”, drain the “HTF” until there is no more flow.
- Remove the top of the Y-Strainer and extract the screen *figure 48 (3-1)*.
- The screen should be cleaned using warm water and a soft bristled brush.
- Reassemble and ensure that all fittings are tight.
- The extracted fluid can be reused.
- Air will have to be purged from the system. Refer to “Operation, Purging air from the “HTF” circulation system” for instructions.



*Figure 48-Y-Strainer Screen*

## HR2250

***\*DANGER!** It is very important that you read and understand this section before operating the hose reel. Failure to follow the procedures and cautions in this manual could lead to injury or possible death!\**

### Precautions

Electric Shock will result in death or serious injury.

- The user is responsible for conforming to all applicable code requirements with the respect to grounding all equipment.
- DO NOT touch unshielded components or terminal strip screw connections with voltage present.
- Install and close all covers before applying power or starting and stopping the hose reel.
- Before servicing:
  - Disconnect all power.
  - Place a “DO NOT TURN ON” label on the drive controller disconnect.
  - Lock disconnect in the open position.
- Disconnect all power including external control power that may be present servicing the drive controller. WAIT 15 MINUTES for the DC bus capacitors to discharge.

## Manual Resets

### Ground Fault

If a fault occurs due to a prolonged overload, overvoltage, under voltage or phase failure, the control must be manually restarted by:

1. Disconnect AC power and **wait at least 30 seconds** for the drive controller to power down.
2. Reconnect the AC power. This will reinitiate the factory default settings.

### Electric Motor

- The electric motor used to drive the reel is a Marathon.
- No regular maintenance is required.
- Make sure that the motor is not in prolonged contact with moisture during operation or storage.



Figure 49-Marathon Electric Motor

### Torque Limiter Adjustment

- Although the torque limiter clutch is factory (DRYAIR) set, periodic adjustment may be required. It is recommended that the torque setting of the clutch be checked twice a season. With prolonged use, the two friction disks located on either side of the A-plate sprocket will eventually show wear.
- It is very important that the torque limiter clutch is adjusted properly. If the clutch slips too easily, the spool will take too long to stop and hose will pile up on the reel. If the clutch does not slip at all, the protection on the Altivar II drive will take over and the spool will again take too long to stop.

*Note: A visual check may be required to confirm whether it is the clutch that is slipping or whether it is the Altivar II drive that is automatically adjusting in an overload situation.*

- Check that the clutch is adjusted properly with the following procedure.

### Physical Check

- With no power being applied to the reel, grip the edge of the spool plate and apply full upward force, making sure that you are lifting with your legs and not your back.
- You should be able to cause the clutch to just slip with full lifting force.
- If the clutch does not slip or slips too easily, refer to the “torque adjust procedure” in the next section.

### Torque Adjust Procedure

- Ensure that the adjusting nut is in a finger tight position.
- If the adjustment nut is tighter than finger tight, loosen and complete previous step.
- Match mark the adjusting nut with the hub. Using a torque wrench tighten the adjusting nut to 90ft Lbs. After the break-away torque is set, bend the tabs on the lock washer over the hex flats of the adjusting nut.

*Note: The torque limiter clutch nut requires a reasonable amount of force to adjust. Use a torque wrench that provides you with a least 18” of leverage.*

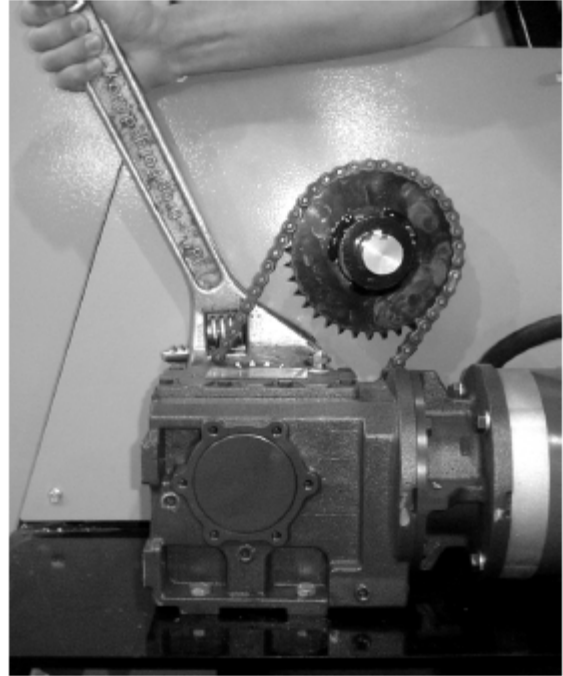


Figure 50-Torque Limiter Adjustment

### Run In Procedure

- If the torque has been taken apart and reassembled or friction disks have been changed, it is recommended that the clutch be “run in” by “slipping” the center member (sprocket).
- Ensure that the adjusting nut is in a finger tight position.
- Match mark the adjusting nut and hub. Advance the adjusting nut ¼ turn from finger tight.
- Slip the torque limiter sprocket for 8 minutes at full RPM.
- Refer back to the “Toque Adjust Procedure” for final readjustment.

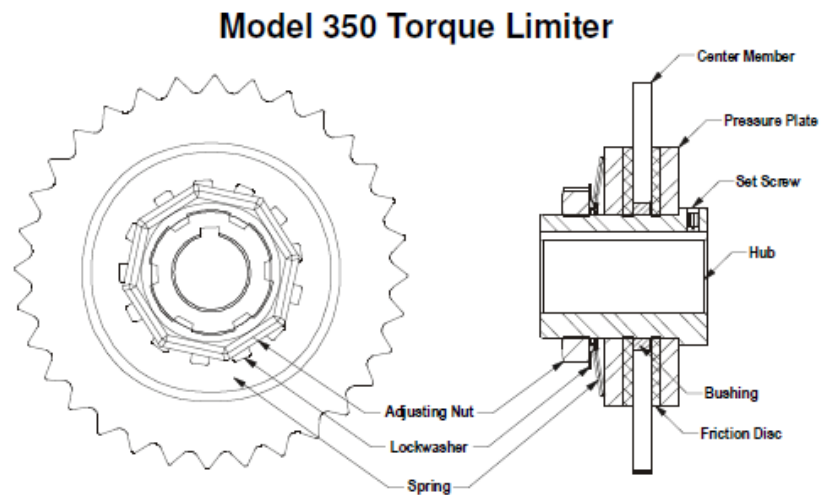


Figure 51-Torque Limiter Assembly

## Gear Box

### Maintenance & Operation

#### WARNING

Oil, housing, and other components can reach high temperatures during operation, and can cause severe burns. Use extreme care when removing lubrication plugs and vents while servicing the unit.

- Do not operate the unit without making sure it contains the correct amount of oil. Do not overfill or under fill with oil, or injury to personnel, the unit or other equipment may result.
- For proper operation in subzero conditions, it is mandatory that the following oil be used: **“Spartan EP 320 industrial gear oil”**...any other gear oil will void warranty!

#### Oil Filling Procedure

- Remove Fill (#1) and Breather Plug (#2).
- Clean threads on the removed plugs and the plug holes with degreaser.
- Fill gear box with the recommended lubricant (see above) to a level near the centerline of the uppermost horizontal shaft or until lubricant comes out the oil level plug hole.
- Install plugs secure in gear case.

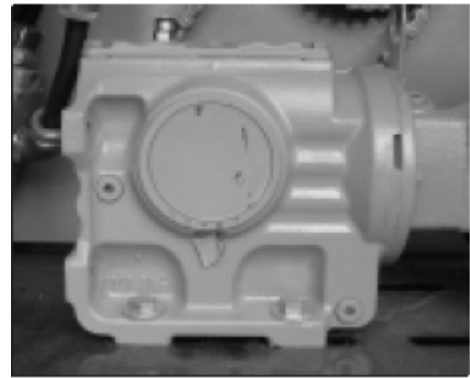


Figure 52-Gear Box

#### Break In Period

After the first 100 hours of operation, drain out initial oil, flush out the gear case with an approved non-flammable, non-toxic solvent such as Whitmore’s Flushing Oil (#06802030) or Medallion Flushing Oil Kosher (#06812010), and refill. Thereafter, oil should be changed at least every 2500 operating hours or every 6 months, whichever occurs first.

*Note: Oil should be changed with a greater frequency if unit is used in severe environments such as dust or high humidity.*


# 9. Appendix

## Important Operation Information


### Non-Pressure Vessel

- The unit includes an open atmospherically vented expansion tank.
- The expansion tank is integrally connected to the heat exchanger section on the water heater by means of a permanently open line (no valves).
- The heat exchange section connects to the inlet side of the circulating pump and therefore, only neutral atmospheric pressure is present within the heat exchange section.

## Heater Specifications



St. Bri ux, SK  
Canada  
S0K 3V0



MADE IN CANADA

<b>DRYAIR Model:</b>	900 GTS	<b>Reference:</b>	
<b>Serial No.:</b>		<b>Prod. Sched.:</b>	

Main Power	
Volts:	230 V (2L,N,G)
Phase:	1
Hz:	60 HZ
Max. Ampacity	30 A
Control Voltage	115 V

Oil Burner		
Model:	Riello 40-F20	
Fuel:	#2 Heating Oil	#1 Heating Oil
Calorific Value:	140,000 BTU / US Gal.	136,000 BTU / US Gal.
Output:	707,952 BTUH	687,725 BTUH
Fuel Input:	6.02 US GPH	
Pump Pressure:	145 P.S.I.	

Clearances:	
Sides	24" (61cm) minimum
Flue	36" (91cm) minimum
Floor	0" (0cm) non-combustible

003-900785-R1

Figure 53-Serial Number/Specification Label 900 GTS

# Electrical Schematic

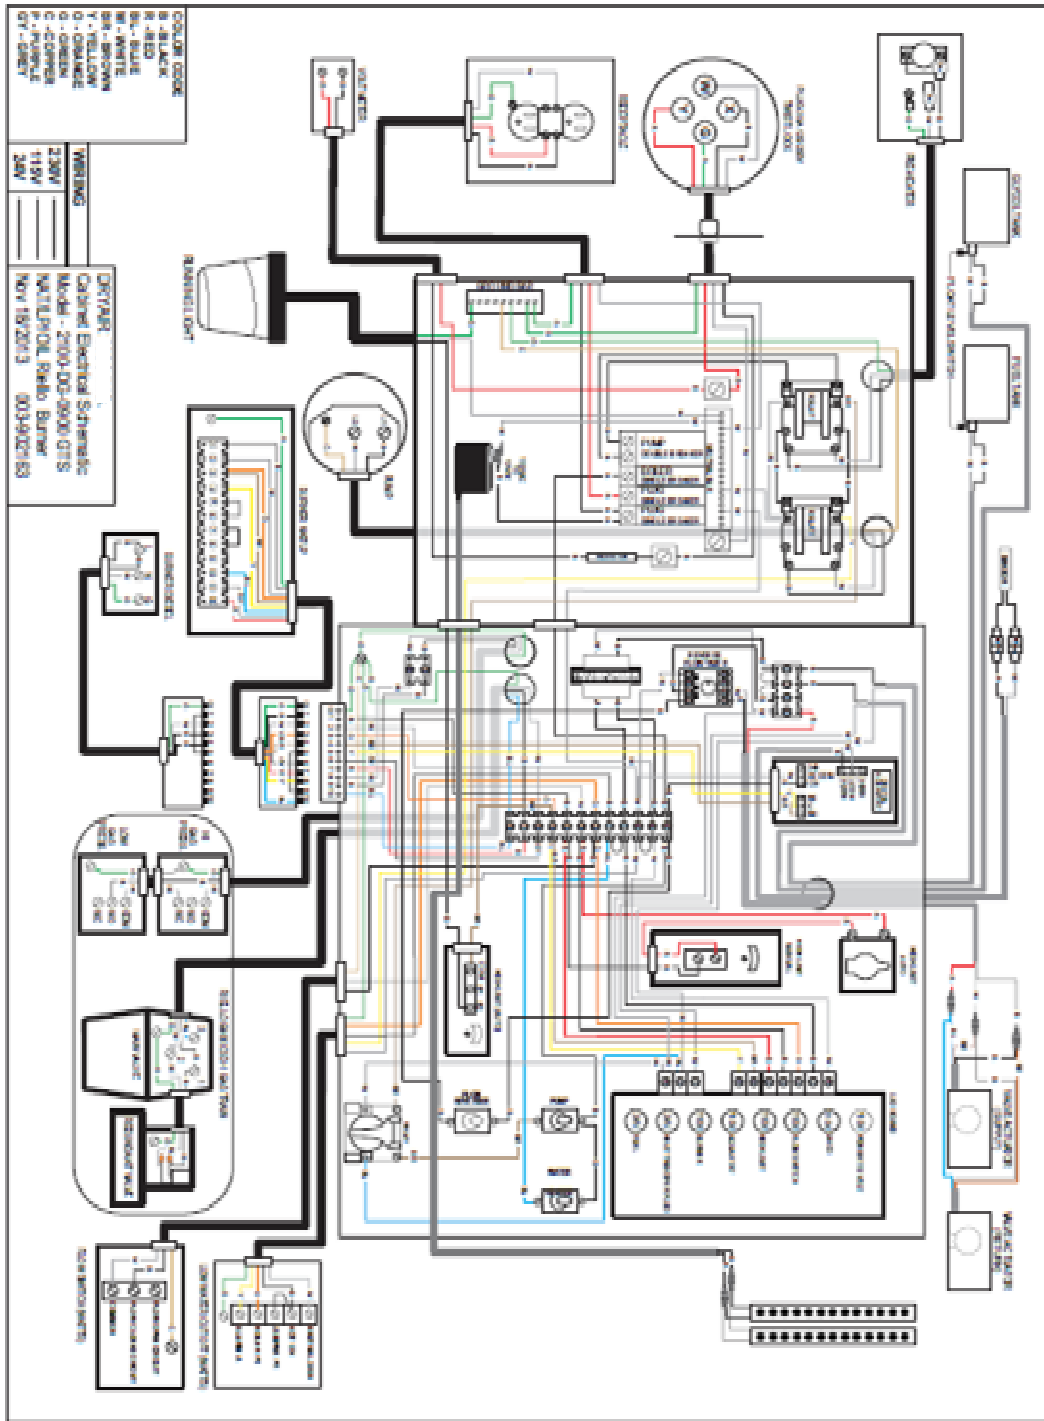


Figure 54-900 GTS Electrical Schematic

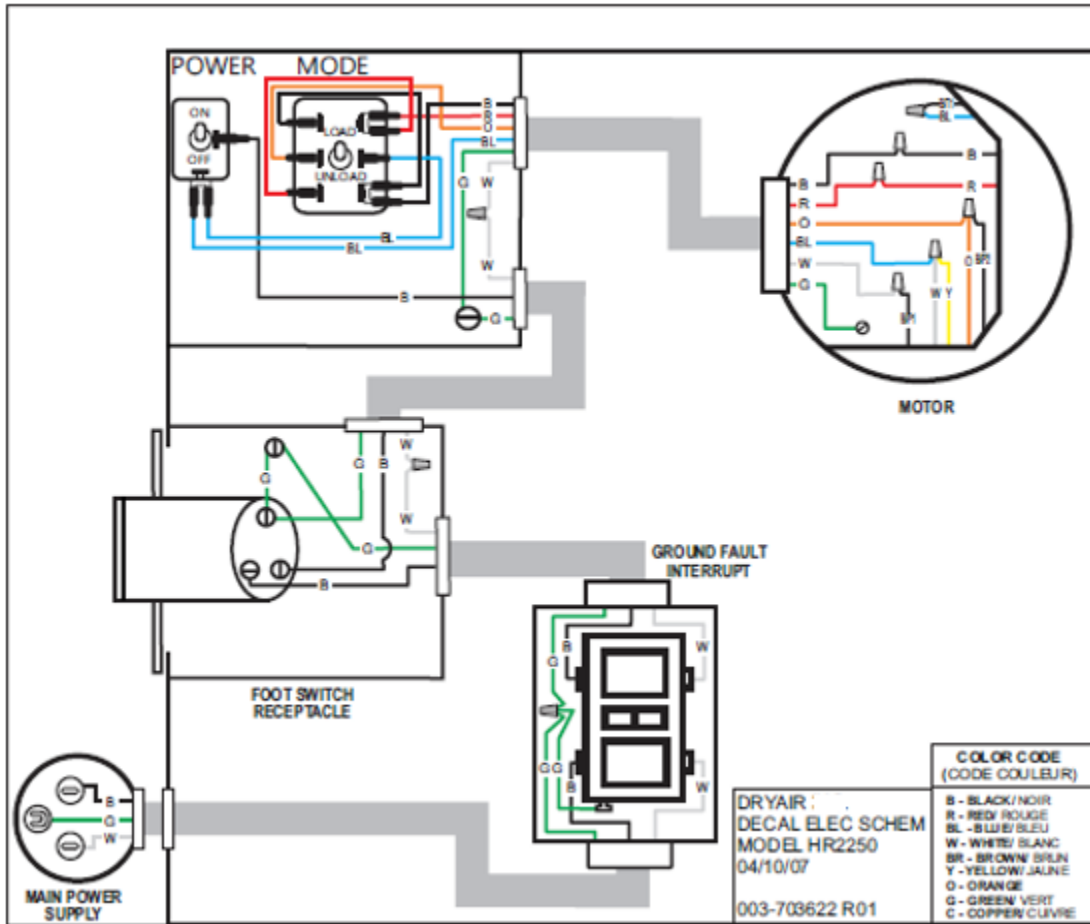


Figure 55-HR2250 Electrical Schematic

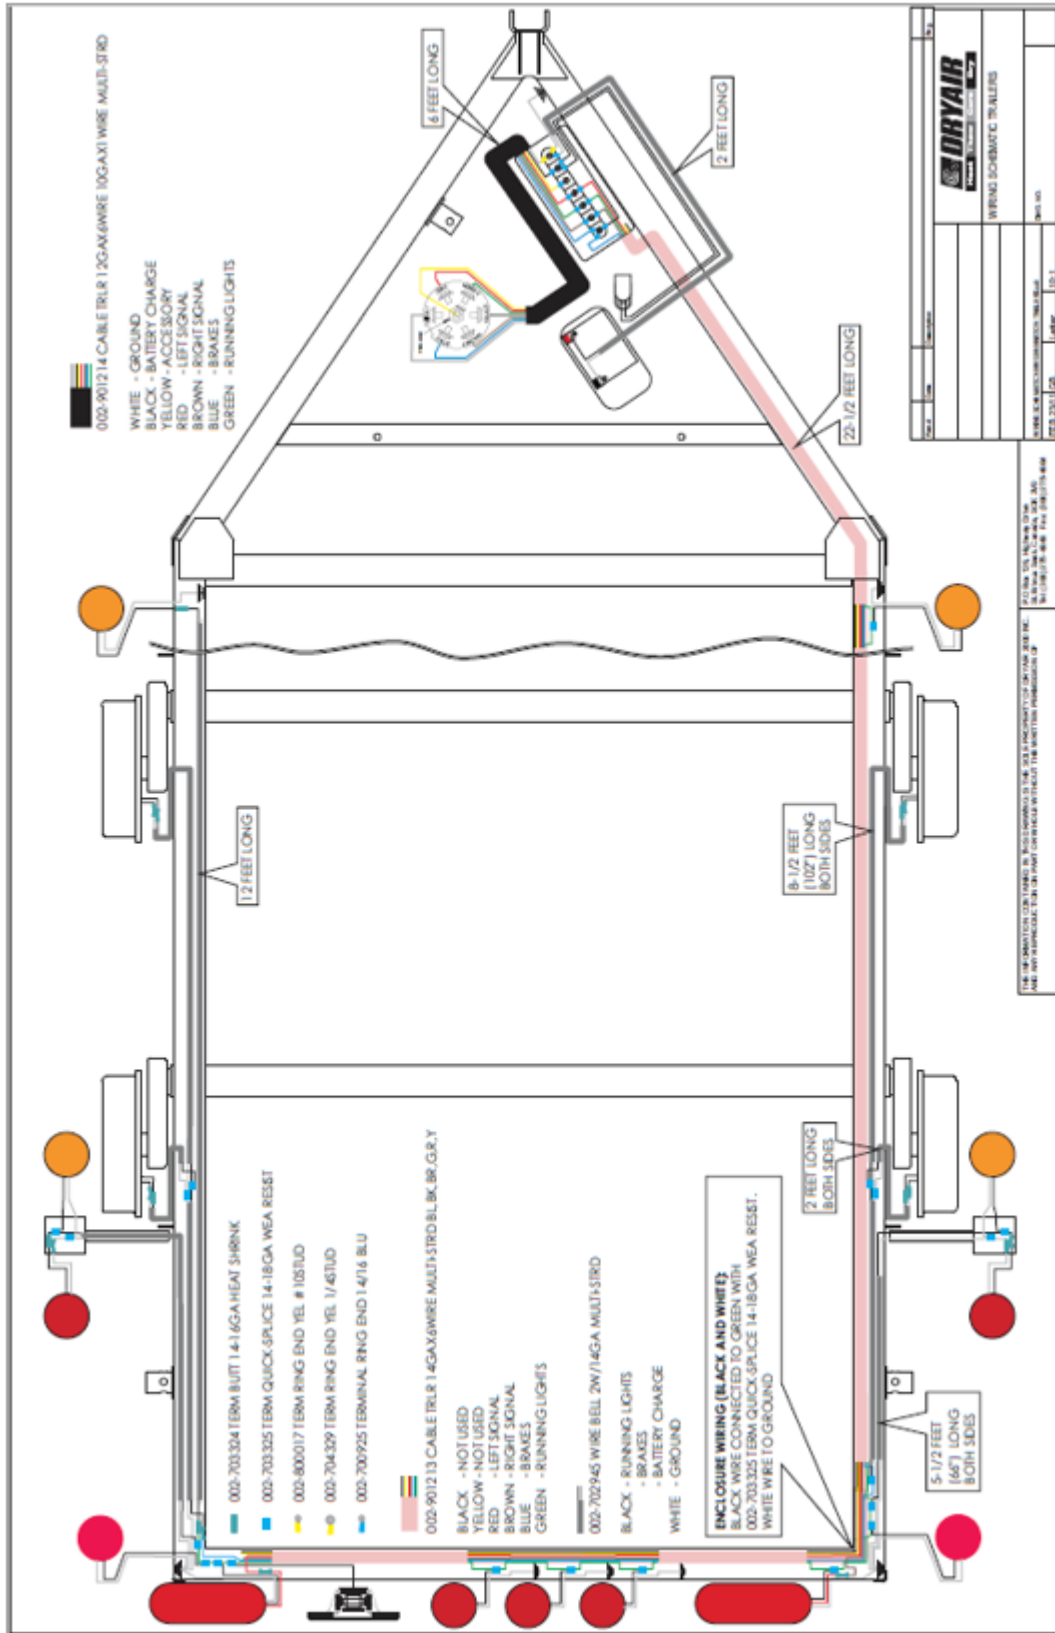


Figure 56-Trailer Wiring Schematic



## Heat Transfer Fluid Preheater Information

### Function

- The design intention for the HTF preheater is to ensure a smooth start in cold environments. The preheater heats the glycol in the heat exchanger which in turn sends heated glycol to DRYAIR'S patented air and fuel preheater to provide a controlled constant air and fuel temperature thus providing smooth start operations in cold weather.

DRYAIR'S Patented HTF Preheater

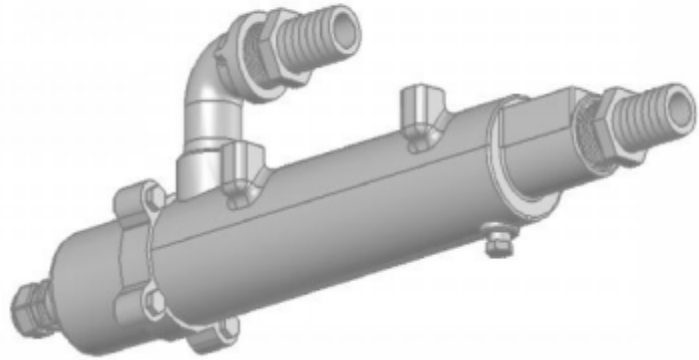


Figure 57-HTF Preheater

- While using the HTF preheater it is recommended to have a supply temperature to be between 140°F and 150°F (60°C to 65°C) before turning on the pump and burner switch. The time line before these temperatures can be achieved will depend on the ambient temperature outside. Basically, the colder environment outside the longer it will take to achieve the recommended supply temperature.

### Pros of Using HTF Preheater:

- Using the HTF preheater according to recommendations will ensure a smooth start in all weather conditions thus providing a superior product to all users.
- Allows the machine to operate in even the coldest environments with fewer combustion issue.
- Less down time and reduced fuel costs as units will start and run at maximum efficiency.
- Having warm glycol reduces initial load to the glycol circulating pump at start up.
- Increase heat exchanger longevity and efficiency.
- Decreases maintenance costs due to the reduced stress on all components during cold startups.

### Cons of Not Using HTF Preheater:

- Burner may not fire which in turn will create down time on job locations. For competitor's units that do not have a preheater option, this typically means bringing the unit off site to a heated shop to allow the unit to thaw out before it will fire. Again, it will depend on the ambient temperature inside the shop as to how long this will take but in any event, it will take much longer compared to using the preheater on the DRYAIR unit.

- If the unit does start in cold temperatures, there is potential for the heat exchanger to accumulate soot due to not having a controlled environment of air and fuel going into the burner. Sooting will stop after the unit warms up if the settings on the burner are correct. Every 1 mm of soot accumulated on the heat exchanger results in a 5% loss of efficiency compared to a clean exchanger. Running the preheater on the DRYAIR unit eliminates the need to adjust burner settings in reaction to changing weather conditions.
- Decreases heat exchanger service life.
- Increases maintenance costs due to added stress on all components during cold startups.

**In Conclusion:**

Using the preheater as instructed in the manual will allow you to operate DRYAIR units in colder climates without sacrificing efficiency or long term reliability of the unit. DRYAIR recommends planning ahead and starting the preheater to allow it to run while the units is in transit to the jobsite (running on generator power) and while operators are reeling out and placing hose on the site. This will still make for productive use of the time while allowing the unit to benefit from the patented preheater feature. If the operator decides they do not want to wait for the preheater to work, the DRYAIR unit will perform just like any of our competitor's units that do not have a preheater option.



## **Material Safety Data Sheets**

The Material Safety Data Sheets (MSDS) included with this manual have been provided by DRYAIR'S Suppliers.



## MATERIAL SAFETY DATA SHEET

### SECTION 1: CHEMICAL PRODUCT AND COMPANY IDENTIFICATION

**PRODUCT NAME:** BOSS CHILL PROPYLENE GLYCOL  
 PROPYLENE-GLYCOL BASED  
 Heat Transfer Fluid Concentrate

**Date Prepared:** Sept 19, 2014

### COMPANY IDENTIFICATION

**Supplier:** BOSS LUBRICANTS  
 112, 6303 – 30 STREET SE  
 Calgary, AB T2C 1R4

**Telephone:** 403-279-2223

**Fax:** 403-279-2272

**Toll Free:** 800-844-9457

#### National Fire Protection Association

1	Health
1	Flammability
0	Reactivity
	Special



**Product Name:** BOSS CHILL PROPYLENE GLYCOL

**Product Description:** Propylene Glycol based industrial coolant and/or heat transfer fluid

**Chemical Name:** Inhibited propylene glycol, aqueous solution

**Chemical Family:** Mixture

**Formula:** Mixture

**Synonyms:** Heat transfer fluid, coolant

**DOT Identification:** Not regulated

**DOT Shipping No.:** Not regulated

**Manufacturer:** BOSS LUBRICANTS

### SECTION 2: TYPICAL COMPOSITION

<u>Material</u>	<u>CAS No</u>	<u>%Wt</u>
-----------------	---------------	------------





Propylene Glycol	000057-55-6	96%
Proprietary inhibitors	Not applicable	4%
Deionized Water	007732-18-5	Balance

This document is prepared pursuant to the OSHA Hazard Communication Standard (29 CFR 1910.122). In addition, other substances not "Hazardous" per this OSHA Standard may be listed. Where proprietary ingredients shows, the identity may be made available as provided in this standard.

**BOSS CHILL PROPYLENE GLYCOL  
BOSS LUBRICANTS: MATERIAL SAFETY DATA SHEET**

**SECTION 3: HAZARDOUS IDENTIFICATION**

**Health:** 2  
**Flammability:** 0  
**Reactivity:** 0  
**Special:** 0  
 0 = minimal 1 = slight 2 = moderate 3 = serious 4 = severe

HMIS
H # 2
F # 0
R # 0
PPE†
†Sec.8

**ROUTE(S) of Entry**

**Inhalation** A single prolonged (hours) inhalation exposure is not likely to cause adverse effects. Mists in high concentrations may cause irritation of nose and throat, cause headache, nausea or drowsiness. Prolonged or repeated exposure may result in the absorption of potentially harmful amounts of material.

**Skin:** A single prolonged exposure is not likely to result in the material being absorbed through skin in harmful amounts. Repeated exposure may cause slight flaking, tenderness and softening of skin.

**Ingestion:** Single dose oral toxicity is low. If more than several mouthfuls are swallowed, abdominal discomfort, nausea or diarrhea may occur

**Eyes:** May cause minor irritation of eyes in some individuals. Corneal injury is unlikely.

**Target Organs:** None known

**Effect of overexposure:** Repeated excessive ingestion may cause central nervous system effects. No carcinogenic effects have been seen in long-term animal studies. Birth defects are unlikely. Exposure having no adverse effects on the mother should have no effect





on the fetus. In animal studies, it has been shown not to interfere with reproduction. Results of mutagenicity tests in-vitro (test tube) and in animals have been negative.

**Signs and Symptoms of Exposure:**

Redness and/or stinging sensation in eyes or on skin. Minor eye or skin irritation may occur with some people.

**Medical conditions Generally Aggravated by**

**Long-Term Exposure:**

**Chronic Effects:** None known.

**Carcinogenicity**

**NTP:** None known

**IARC Monographs:** None known

**OSHA regulations:** None known

**ACGIH** None known

**SECTION 4: FIRST AID MEASURES**

**Emergency and First Aid Procedures**

**Eye Contact:** Flush eyes with large amounts of water for 15 minutes. If irritation persists, get medical attention.

**Skin Contact:** Wash off in flowing water or shower. Wash contaminated clothing before reuse.

**Ingestion:** DO NOT induce vomiting immediately and GET IMMEDIATE MEDICAL ATTENTION.

Never give anything by mouth to an unconscious person.

**Inhalation:** Remove to fresh air. If breathing has stopped, start artificial respiration. Seek medical attention.

**Note to Physicians:** Treat symptomatically. No specific antidote. Supportive care. Treatment based on judgment of physician in response to reactions of the patient.

**Special Precautions/**


**Procedure.** None known

**SECTION 5: FIRE-FIGHTING MEASURES**

**NFPA**

**Flash Point:** None

**Flash Point Method:** Not applicable

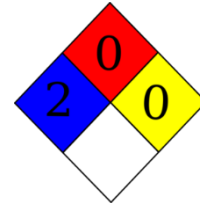

**Autoignition**

**Burning Rate:** Not available  
**Temperature:** Not available  
**Flammable limits in air (% by Volume)**  
**LEL:** Not available  
**UEL:** Not available

**Extinguishing Media:** Water for, fog, foam, CO2, dry chemical. Alcohol resistant foams (ATC type) are best when available. Do not use direct water stream as it may spread the fire.

**Unusual Fire or Explosion** Closed containers may rupture or explode due to steam pressure build-up when exposed to extreme heat.

**Hazards:** Water may be used to cool closed containers. Do not use a direct water stream on fire. Container may rupture from gas generation in a fire situation.

**Fire-Fighting Instructions:** Do not release runoff from fire control methods to sewers or waterways.

**Fire Fighting Equipment:** Full protective equipment including positive-pressure, self-contained breathing apparatus. During emergency conditions, overexposure to decomposition products may cause a health hazard. Symptoms may not be immediately apparent. Seek medical attention.

**Unusual Fire Fighting** Keep people out of the area and isolate fire. Burning liquids may be moved by flushing with water.

**Procedures:** Do not use a direct water stream as it may spread fire.

**SECTION 6: ACCIDENTAL RELEASE MEASURES**

**Spill/Leak Procedures:** Recover useable material by convenient method; residual may be removed by wipe or wet mop.

**Small Spills** Small spills should be absorbed with a suitable inert material (sand, earth, clay, etc.) Remove the absorbed material and place in an appropriate chemical waste container for disposal.

**Large Spills:** Large spills should be diked and pumped.

**Containment:** For large spills, dike far ahead of liquid spill for later disposal.

**Regulatory Requirements:** Follow applicable OSHA REGULATIONS (29 CFR 1910.120).



## SECTION 7: HANDLING AND STORAGE

- Handling Procedures:** Wear impermeable gloves and other protective clothing to avoid prolonged or repeated skin contact. When handling, wear eye protection.
- Storage Requirements:** Keep containers tightly closed when not in use. Store only in containers resistant to alkaline solutions with a pH of 9.0-12.0.

## SECTION 8: EXPOSURE CONTROLS/PERSONAL PROTECTION

- Exposure Guidelines:** Propylene Glycol: AIHA WEEL is 50 ppm total, 10mg/m<sup>3</sup> aerosol only. 10mg.m<sup>3</sup> for Propylene Glycol mist, 400ppm for Propylene Glycol vapors.
- Ventilation:** Provide general or local exhaust ventilation systems.
- Administrative Controls**
- Respiratory Protection:** If personal exposure cannot be controlled below applicable exposure limits by ventilation, wear respiratory devices approved by NIOSH/MSHA, for protection against organic vapors, dust, fumes and mists.
- Protective Clothing/ Equipment:** Wear chemically protective gloves, boots, aprons, and gauntlets to prevent prolonged or repeated skin contact. Wear protective eyeglasses or chemical safety goggles.
- Work and Hygienic Practices:** Wash or rinse hands before touching eyes or contact lenses, and before eating.
- Safety Stations:** Make emergency eyewash stations, safety/quick-drench showers, and washing facilities available in work area.

## SECTION 9: PHYSICAL AND CHEMICAL PROPERTIES

- Appearance and odor:** dyed purple                      odor less
- Boiling point (760 mmHg):** 317°F 188°C
- Specific Gravity (water=1)** 1.040 - 1.060
- Solubility in Water (%by wt):** Complete
- pH:** 9.0 - 10.5
- Vapor Density) air=1):** <1.0
- Vapor Pressure:** 2.2mmHg

## SECTION 10: STABILITY AND REACTIVITY

- Stability:** Stable
- Polymerization:** Hazardous polymerization cannot occur
- Chemical Incompatibilities:** Oxidizing materials, strong acids
- Conditions to avoid:** Avoid contact with strong acids and strong oxidizers





**Hazardous decomposition Products:** Depends upon temperature, air supply and the presence of other materials

#### SECTION 11: TOXICOLOGICAL INFORMATION

**Eye Effects:** Irritating to eyes.  
**Skin Effects:** The LD50 for skin absorption in rabbits is >10,000 mg/kg.  
**Acute Inhalation Effects:** Significant vapors are only generated at elevated temperatures; may irritate nose and respiratory system.  
**Acute Oral Effects:** The oral LD50 for rats is 20,000-34,000 mg/kg.  
**Chronic Effects:** Liver and kidney damage in a 2 year rat feeding study using 1-2% Propylene Glycol  
Oral administration of very high doses of Propylene Glycol produced birth defects in laboratory animals.  
**Carcinogenicity:** None known  
**Mutagenicity:** Not mutagenic  
**Teratogenicity:** Not Teratogenic

#### SECTION 12: ECOLOGICAL INFORMATION

**Ecotoxicity:** Base primarily on data for the major components, product is practically non-toxic to aquatic organisms.  
**Irritation Index/Estimation of Irritation (Species):** Not determined.  
**Environmental Fate:** Decomposes to carbon, oxygen, nitrogen and water.  
**Environmental Degradation:** Biodegradable  
**Soil Absorption/Mobility:** Not determined

#### SECTION 13: DISPOSAL CONSIDERATIONS

**Waste disposal method;** Sanitary landfill or incinerate in approved facilities in accordance with local, state and federal regulations. Do not dump into any sewers, on the ground or into any body of water.  
**Disposal Regulatory** This product, if unused, does not meet the RCRA criteria for being identified as a hazardous waste by characteristics.  
**Requirements:**  
**Container Cleaning and Disposal:** Containers should be cleaned or residual product before disposal, and disposed of in accordance with all applicable laws and regulations.

#### SECTION 14: TRANSPORT INFORMATION

**DOT Shipping Name:** Not regulated  
**Shipping Symbols:** Not applicable  
**Hazard Class:** Not applicable **DOT**  
**Identification No.:** Not regulated



**Packing Group:** Not applicable  
**Label:** Not applicable  
**Special Provisions (172.102):** Not applicable

**Packaging Authorizations**

a) **Exceptions:** Not applicable  
b) **Non-bulk Packaging:** Not applicable  
c) **Bulk Packaging:** Not applicable

**Quantity Limitations**

a) **Passenger, Aircraft, or Railcar:** Not applicable  
b) **Cargo Aircraft Only:** Not applicable

**Vessel Stowage Requirements**

a) **Vessel Stowage:** Not applicable  
b) **Other:** Not applicable

**SECTION 15: REGULATORY INFORMATION**

**Regulatory Information:** **Notice:** The information herein is presented in good faith and believed to be as accurate as the effective date shown above. However, no warranty, expressed or implied, is given. Regulatory requirements are subject to change and may differ from one location to another. It is the buyer's responsibility to ensure that its activities comply with federal, state or provincial and local laws. The following specific information is made for the purpose of complying with numerous federal, state or provincial, and local laws and regulations

(Not meant to be all-inclusive -selected regulations represented.)

**EPA Regulations**

RCRA Hazardous Waste Number and RCRA  
Hazardous Waste Classification: Not applicable  
CERCLA Hazardous Substance and CERCLA Reportable Quantity: Not applicable

SARA313: To the best of our knowledge this product contains no chemical subject to SARA TITLE 111 Section 313 supplier notification requirements

SARA Hazard Category: This product has been reviewed according to the EPA "Hazard Categories promulgated under Section 311 and 312 of the Superfund Amendment and



Re-Authorization Act of 1986 (SARA Title III) and is considered, under applicable definitions not to have met any hazard category.

**OSHA regulations:**

This product is not a “Hazardous Chemical” as defined by the OSHA Hazard Communication Standard, 29 CFR 1910.1200

**WHMIS:**

(The Canadian Workplace Materials Information System)

Not a “Controlled Product” under WHMIS

Subdivision B (A toxic material causing other chronic effects) Hazardous

**SECTION 16 OTHER INFORMATION**

**Additional Hazard Rating Systems:** None

**Disclaimer: THE INFORMATION GIVEN HEREIN IS GIVEN IN GOOD FAITH AND FROM SOURCES WE BELIEVE RELIABLE. BUT NO WARRANTY, EXPRESS OR IMPLIED, REGARDING ITS CORRECTNESS IS MADE.**

The conditions or methods of handling, storage, use and disposal of this product are beyond our control and may be beyond our knowledge. For this and other reasons, we do not assume responsibility and expressly disclaim liability for loss, damage or expense arising out of or in any way connected with the handling, storage, use or disposal of this product.

This MSDS was prepared and is to be used only for this product. If the product is used as a component in another product, this MSDS information may not apply.

**CONSULT COMPANY LISTED IN SECTION 1 FOR FURTHER INFORMATION.**



# Material Safety Data Sheet

## DOW CHEMICAL CANADA ULC

Product name: DOWFROST™ Heat Transfer Fluid

Issue Date: 01/23/2015

Print Date: 06/29/2015

DOW CHEMICAL CANADA ULC encourages and expects you to read and understand the entire (M)SDS, as there is important information throughout the document. We expect you to follow the precautions identified in this document unless your use conditions would necessitate other appropriate methods or actions.

---

## 1. PRODUCT AND COMPANY IDENTIFICATION

---

Product name: DOWFROST™ Heat Transfer Fluid

### Recommended use of the chemical and restrictions on use

**Identified uses:** Intended as a heat transfer fluid for closed-loop systems. This product is acceptable for use where there is possibility of incidental food contact and as a product for use in the immersion or spray freezing of wrapped meat and packaged poultry products. We recommend that you use this product in a manner consistent with the listed use. If your intended use is not consistent with the stated use, please contact your sales or technical service representative.

### COMPANY IDENTIFICATION

DOW CHEMICAL CANADA ULC  
SUITE 2100  
450 - 1<sup>ST</sup> STREET S.W.  
CALGARY AB T2P 5H1  
CANADA

**For MSDS Updates and Product Information:** 800-258-2436

**Prepared by:** Prepared for use in Canada by EH&S, Hazard Communications.

**Revision Date:** 01/23/2015

**Print Date:** 06/29/2015

**Customer Information Number:**

800-258-2436

[SDSQuestion@dow.com](mailto:SDSQuestion@dow.com)

### EMERGENCY TELEPHONE NUMBER

**24-Hour Emergency Contact:** 989-636-4400

**Local Emergency Contact:** 613-996-6666

---

## 2. HAZARDS IDENTIFICATION

---

### Emergency Overview

#### Appearance

Physical state                      Liquid.

Color                                      Colorless

**Odor**                                      Characteristic

**Hazard Summary**

No significant immediate hazards for emergency response are known.

**Potential Health Effects**

**Eyes:** May cause slight temporary eye irritation.  
Corneal injury is unlikely.

**Skin:** Prolonged contact is essentially nonirritating to skin.  
Repeated contact may cause flaking and softening of skin.  
Prolonged skin contact is unlikely to result in absorption of harmful amounts.

**Inhalation:** At room temperature, exposure to vapor is minimal due to low volatility.  
Mist may cause irritation of upper respiratory tract (nose and throat).

**Ingestion:** Very low toxicity if swallowed.  
Harmful effects not anticipated from swallowing small amounts.

**Chronic Exposure:** In rare cases, repeated excessive exposure to propylene glycol may cause central nervous system effects.

---

**3. COMPOSITION/INFORMATION ON INGREDIENTS**

---

**Chemical nature:** Glycol  
This product is a mixture.

Component	CASRN	Weight percent
Propylene glycol	57-55-6	> 95.0 %
Dipotassium hydrogen phosphate	7758-11-4	< 3.0 %
Water	7732-18-5	< 3.0 %

---

**4. FIRST AID MEASURES**

---

**Description of first aid measures**

**General advice:** If potential for exposure exists refer to Section 8 for specific personal protective equipment.

**Inhalation:** Move person to fresh air; if effects occur, consult a physician.

**Skin contact:** Wash off with plenty of water.

**Eye contact:** Flush eyes thoroughly with water for several minutes. Remove contact lenses after the initial 1-2 minutes and continue flushing for several additional minutes. If effects occur, consult a physician, preferably an ophthalmologist.

**Ingestion:** No emergency medical treatment necessary.

**Most important symptoms and effects, both acute and delayed:** Aside from the information found under Description of first aid measures (above) and Indication of immediate medical attention and special treatment needed (below), any additional important symptoms and effects are described in Section 11: Toxicology Information.

**Indication of any immediate medical attention and special treatment needed**

**Notes to physician:** No specific antidote. Treatment of exposure should be directed at the control of symptoms and the clinical condition of the patient.

---

## 5. FIREFIGHTING MEASURES

---

**Suitable extinguishing media:** Water fog or fine spray. Dry chemical fire extinguishers. Carbon dioxide fire extinguishers. Foam. Alcohol resistant foams (ATC type) are preferred. General purpose synthetic foams (including AFFF) or protein foams may function, but will be less effective.

**Unsuitable extinguishing media:** Do not use direct water stream. May spread fire.

**Special hazards arising from the substance or mixture**

**Hazardous combustion products:** During a fire, smoke may contain the original material in addition to combustion products of varying composition which may be toxic and/or irritating. Combustion products may include and are not limited to: Carbon monoxide. Carbon dioxide.

**Unusual Fire and Explosion Hazards:** Container may rupture from gas generation in a fire situation. Violent steam generation or eruption may occur upon application of direct water stream to hot liquids.

**Advice for firefighters**

**Fire Fighting Procedures:** Keep people away. Isolate fire and deny unnecessary entry. Use water spray to cool fire exposed containers and fire affected zone until fire is out and danger of reignition has passed. Fight fire from protected location or safe distance. Consider the use of unmanned hose holders or monitor nozzles. Immediately withdraw all personnel from the area in case of rising sound from venting safety device or discoloration of the container. Burning liquids may be extinguished by dilution with water. Do not use direct water stream. May spread fire. Move container from fire area if this is possible without hazard. Burning liquids may be moved by flushing with water to protect personnel and minimize property damage.

**Special protective equipment for firefighters:** Wear positive-pressure self-contained breathing apparatus (SCBA) and protective fire fighting clothing (includes fire fighting helmet, coat, trousers, boots, and gloves). If protective equipment is not available or not used, fight fire from a protected location or safe distance.

---

## 6. ACCIDENTAL RELEASE MEASURES

---

**Personal precautions, protective equipment and emergency procedures:** Use appropriate safety equipment. For additional information, refer to Section 8, Exposure Controls and Personal Protection.

**Environmental precautions:** Prevent from entering into soil, ditches, sewers, waterways and/or groundwater. See Section 12, Ecological Information.

**Methods and materials for containment and cleaning up:** Small spills: Absorb with materials such as: Cat litter. Sawdust. Vermiculite. Zorb-all®. Collect in suitable and properly labeled containers. Large spills: Dike area to contain spill. Recover spilled material if possible. See Section 13, Disposal Considerations, for additional information.

---

## 7. HANDLING AND STORAGE

---

**Precautions for safe handling:** No special precautions required. Keep container closed. See Section 8, EXPOSURE CONTROLS AND PERSONAL PROTECTION.

Spills of these organic materials on hot fibrous insulations may lead to lowering of the autoignition temperatures possibly resulting in spontaneous combustion.

**Conditions for safe storage:** Do not store in: Galvanized steel. Opened or unlabeled containers. Store in original unopened container. See Section 10 for more specific information. Additional storage and handling information on this product may be obtained by calling your sales or customer service contact.

---

## 8. EXPOSURE CONTROLS/PERSONAL PROTECTION

---

### Control parameters

Exposure limits are listed below, if they exist.

Component	Regulation	Type of listing	Value/Notation
Propylene glycol	US WEEL	TWA	10 mg/m <sup>3</sup>
	CA ON OEL	TWAEV Total	155 mg/m <sup>3</sup> 50 ppm
	CA ON OEL	TWAEV	10 mg/m <sup>3</sup>
	CA ON OEL	TWA	155 mg/m <sup>3</sup> 50 ppm
	CA ON OEL	TWA	10 mg/m <sup>3</sup>

Consult local authorities for recommended exposure limits.

### Exposure controls

**Engineering controls:** Use local exhaust ventilation, or other engineering controls to maintain airborne levels below exposure limit requirements or guidelines. If there are no applicable exposure limit requirements or guidelines, general ventilation should be sufficient for most operations. Local exhaust ventilation may be necessary for some operations.

### Individual protection measures

**Eye/face protection:** Use safety glasses (with side shields).

#### Skin protection

**Hand protection:** Use gloves chemically resistant to this material when prolonged or frequently repeated contact could occur. Examples of preferred glove barrier materials include: Butyl rubber. Natural rubber ("latex"). Neoprene. Nitrile/butadiene rubber ("nitrile" or "NBR"). Polyethylene. Ethyl vinyl alcohol laminate ("EVAL"). Polyvinyl alcohol ("PVA"). Polyvinyl chloride ("PVC" or "vinyl"). NOTICE: The selection of a specific glove for a particular application and duration of use in a workplace should also take into account all relevant workplace factors such as, but not limited to: Other chemicals which may be handled, physical requirements (cut/puncture protection, dexterity, thermal protection), potential body reactions to glove materials, as well as the instructions/specifications provided by the glove supplier.

**Other protection:** Wear clean, body-covering clothing.

**Respiratory protection:** Respiratory protection should be worn when there is a potential to exceed the exposure limit requirements or guidelines. If there are no applicable exposure limit requirements or guidelines, wear respiratory protection when adverse effects, such as respiratory irritation or discomfort have been experienced, or where indicated by your risk assessment process. In misty atmospheres, use an approved particulate respirator. The following should be effective types of air-purifying respirators: Organic vapor cartridge with a particulate pre-filter.

---

## 9. PHYSICAL AND CHEMICAL PROPERTIES

---

### Appearance

Physical state	Liquid.
Color	Colorless
Odor	Characteristic
Odor Threshold	No test data available
pH	10.0 50% <i>Literature</i>
Melting point/range	Not applicable to liquids
Freezing point	supercools
Boiling point (760 mmHg)	152 °C <i>Literature</i>
Flash point	<b>closed cup</b> 104 °C <i>Pensky-Martens Closed Cup ASTM D 93</i> (based on major component), Propylene glycol. <b>open cup</b> <i>Cleveland Open Cup ASTM D92</i> None
Evaporation Rate (Butyl Acetate = 1)	<0.5 <i>Estimated.</i>
Flammability (solid, gas)	Not applicable to liquids
Lower explosion limit	2.6 % vol <i>Literature</i> Propylene glycol.
Upper explosion limit	12.5 % vol <i>Literature</i> Propylene glycol.
Vapor Pressure	2.2 mmHg <i>Literature</i>
Relative Vapor Density (air = 1)	>1.0 <i>Literature</i>
Relative Density (water = 1)	1.05 at 20 °C / 20 °C <i>Literature</i>
Water solubility	100 % <i>Literature</i>
Partition coefficient: n-octanol/water	no data available
Auto-ignition temperature	371 °C <i>Literature</i> Propylene glycol.
Decomposition temperature	No test data available
Kinematic Viscosity	43.4 cSt at 20 °C <i>Literature</i>
Explosive properties	no data available
Oxidizing properties	no data available
Molecular weight	76.9 g/mol <i>Literature</i>

NOTE: The physical data presented above are typical values and should not be construed as a specification.



---

---

## 10. STABILITY AND REACTIVITY

---

**Reactivity:** no data available

**Chemical stability:** Stable under recommended storage conditions. See Storage, Section 7.  
Hygroscopic

**Possibility of hazardous reactions:** Polymerization will not occur.

**Conditions to avoid:** Exposure to elevated temperatures can cause product to decompose. Generation of gas during decomposition can cause pressure in closed systems. Avoid direct sunlight or ultraviolet sources.

**Incompatible materials:** Avoid contact with: Strong acids. Strong bases. Strong oxidizers.

**Hazardous decomposition products:** Decomposition products depend upon temperature, air supply and the presence of other materials. Decomposition products can include and are not limited to: Aldehydes. Alcohols. Ethers. Organic acids.

---

---

## 11. TOXICOLOGICAL INFORMATION

---

*Toxicological information on this product or its components appear in this section when such data is available.*

### Acute toxicity

#### Acute oral toxicity

Very low toxicity if swallowed. Harmful effects not anticipated from swallowing small amounts.

For the major component(s): Propylene glycol.  
LD50, Rat, > 20,000 mg/kg

#### Acute dermal toxicity

Prolonged skin contact is unlikely to result in absorption of harmful amounts.

For the major component(s): Propylene glycol.  
LD50, Rabbit, > 20,000 mg/kg

#### Acute inhalation toxicity

At room temperature, exposure to vapor is minimal due to low volatility. Mist may cause irritation of upper respiratory tract (nose and throat).

For the major component(s):  
LC50, Rat, 4 Hour, vapour, 6.15 mg/l No deaths occurred following exposure to a saturated atmosphere.

### Skin corrosion/irritation

Prolonged contact is essentially nonirritating to skin.  
Repeated contact may cause flaking and softening of skin.

**Serious eye damage/eye irritation**

May cause slight temporary eye irritation.  
Corneal injury is unlikely.

**Sensitization**

For the major component(s):  
Did not cause allergic skin reactions when tested in humans.

For respiratory sensitization:  
No relevant data found.

**Specific Target Organ Systemic Toxicity (Single Exposure)**

Evaluation of available data suggests that this material is not an STOT-SE toxicant.

**Specific Target Organ Systemic Toxicity (Repeated Exposure)**

In rare cases, repeated excessive exposure to propylene glycol may cause central nervous system effects.

**Carcinogenicity**

Similar formulations did not cause cancer in laboratory animals.

**Teratogenicity**

For the major component(s): Did not cause birth defects or any other fetal effects in laboratory animals.

**Reproductive toxicity**

For the major component(s): In animal studies, did not interfere with reproduction. In animal studies, did not interfere with fertility.

**Mutagenicity**

In vitro genetic toxicity studies were negative. For the major component(s): Animal genetic toxicity studies were negative.

**Aspiration Hazard**

Based on physical properties, not likely to be an aspiration hazard.

---

---

## **12. ECOLOGICAL INFORMATION**

---

*Ecotoxicological information on this product or its components appear in this section when such data is available.*

**Toxicity**

**Propylene glycol**

**Acute toxicity to fish**

Material is practically non-toxic to aquatic organisms on an acute basis (LC50/EC50/EL50/LL50 >100 mg/L in the most sensitive species tested).  
LC50, *Oncorhynchus mykiss* (rainbow trout), static test, 96 Hour, 40,613 mg/l, OECD Test Guideline 203

**Acute toxicity to aquatic invertebrates**

LC50, Ceriodaphnia dubia (water flea), static test, 48 Hour, 18,340 mg/l, OECD Test Guideline 202

**Acute toxicity to algae/aquatic plants**

ErC50, Pseudokirchneriella subcapitata (green algae), 96 Hour, Growth rate inhibition, 19,000 mg/l, OECD Test Guideline 201

**Toxicity to bacteria**

NOEC, Pseudomonas putida, 18 Hour, > 20,000 mg/l

**Chronic toxicity to aquatic invertebrates**

NOEC, Ceriodaphnia dubia (water flea), semi-static test, 7 d, number of offspring, 13,020 mg/l

**Dipotassium hydrogen phosphate**

**Acute toxicity to fish**

Material is practically non-toxic to aquatic organisms on an acute basis (LC50/EC50/EL50/LL50 >100 mg/L in the most sensitive species tested).  
LC50, Leuciscus idus (Golden orfe), static test, 48 Hour, > 900 mg/l, Method Not Specified.

**Persistence and degradability**

**Propylene glycol**

**Biodegradability:** Material is readily biodegradable. Passes OECD test(s) for ready biodegradability. Biodegradation may occur under anaerobic conditions (in the absence of oxygen).

10-day Window: Pass

**Biodegradation:** 81 %

**Exposure time:** 28 d

**Method:** OECD Test Guideline 301F or Equivalent

10-day Window: Not applicable

**Biodegradation:** 96 %

**Exposure time:** 64 d

**Method:** OECD Test Guideline 306 or Equivalent

**Theoretical Oxygen Demand:** 1.68 mg/mg

**Chemical Oxygen Demand:** 1.53 mg/mg

**Biological oxygen demand (BOD)**

Incubation Time	BOD
5 d	69.000 %
10 d	70.000 %
20 d	86.000 %

**Photodegradation**

**Atmospheric half-life:** 10 Hour

**Method:** Estimated.

**Dipotassium hydrogen phosphate**

**Biodegradability:** Biodegradation is not applicable.

**Bioaccumulative potential**

**Propylene glycol**

**Bioaccumulation:** Bioconcentration potential is low (BCF < 100 or Log Pow < 3).

**Partition coefficient: n-octanol/water(log Pow):** -1.07 Measured

**Bioconcentration factor (BCF):** 0.09 Estimated.

**Dipotassium hydrogen phosphate**

**Bioaccumulation:** No bioconcentration is expected because of the relatively high water solubility.

**Mobility in soil**

**Propylene glycol**

Given its very low Henry's constant, volatilization from natural bodies of water or moist soil is not expected to be an important fate process.

Potential for mobility in soil is very high (Koc between 0 and 50).

**Partition coefficient(Koc):** < 1 Estimated.

**Dipotassium hydrogen phosphate**

No relevant data found.

---

---

### **13. DISPOSAL CONSIDERATIONS**

---

**Disposal methods:** DO NOT DUMP INTO ANY SEWERS, ON THE GROUND, OR INTO ANY BODY OF WATER. All disposal practices must be in compliance with all Federal, State/Provincial and local laws and regulations. Regulations may vary in different locations. Waste characterizations and compliance with applicable laws are the responsibility solely of the waste generator. AS YOUR SUPPLIER, WE HAVE NO CONTROL OVER THE MANAGEMENT PRACTICES OR MANUFACTURING PROCESSES OF PARTIES HANDLING OR USING THIS MATERIAL. THE INFORMATION PRESENTED HERE PERTAINS ONLY TO THE PRODUCT AS SHIPPED IN ITS INTENDED CONDITION AS DESCRIBED IN MSDS SECTION: Composition Information. FOR UNUSED & UNCONTAMINATED PRODUCT, the preferred options include sending to a licensed, permitted: Recycler. Reclaimer. Incinerator or other thermal destruction device.

---

---

### **14. TRANSPORT INFORMATION**

---

**TDG**

Not regulated for transport

**Classification for SEA transport (IMO-IMDG):**

**Transport in bulk  
according to Annex I or II  
of MARPOL 73/78 and the  
IBC or IGC Code**

Not regulated for transport  
Consult IMO regulations before transporting ocean bulk

**Classification for AIR transport (IATA/ICAO):**

Not regulated for transport

This information is not intended to convey all specific regulatory or operational requirements/information relating to this product. Transportation classifications may vary by container volume and may be influenced by regional or country variations in regulations. Additional transportation system information can be obtained through an authorized sales or customer service representative. It is the responsibility of the transporting organization to follow all applicable laws, regulations and rules relating to the transportation of the material.

---

## 15. REGULATORY INFORMATION

---

### Hazardous Products Act Information: CPR Compliance

This product has been classified in accordance with the hazard criteria of the Canadian Controlled Products Regulations (CPR) and the MSDS contains all the information required by the CPR.

### Hazardous Products Act Information: WHMIS Classification

This product is not a "Controlled Product" under WHMIS.

### Canadian Domestic Substances List (DSL) (DSL)

All substances contained in this product are listed on the Canadian Domestic Substances List (DSL) or are not required to be listed.

---

## 16. OTHER INFORMATION

---

### Hazard Rating System

#### NFPA

Health	Fire	Reactivity
0	1	0

### Revision

Identification Number: 101234106 / A208 / Issue Date: 01/23/2015 / Version: 6.0

Most recent revision(s) are noted by the bold, double bars in left-hand margin throughout this document.

### Legend

CA ON OEL	Canada. Ontario OELs
TWA	8-hr TWA
TWAEV	time-weighted average exposure value
US WEEL	USA. Workplace Environmental Exposure Levels (WEEL)

### Information Source and References

This SDS is prepared by Product Regulatory Services and Hazard Communications Groups from information supplied by internal references within our company.

DOW CHEMICAL CANADA ULC urges each customer or recipient of this (M)SDS to study it carefully and consult appropriate expertise, as necessary or appropriate, to become aware of and understand

the data contained in this (M)SDS and any hazards associated with the product. The information herein is provided in good faith and believed to be accurate as of the effective date shown above. However, no warranty, express or implied, is given. Regulatory requirements are subject to change and may differ between various locations. It is the buyer's/user's responsibility to ensure that his activities comply with all federal, state, provincial or local laws. The information presented here pertains only to the product as shipped. Since conditions for use of the product are not under the control of the manufacturer, it is the buyer's/user's duty to determine the conditions necessary for the safe use of this product. Due to the proliferation of sources for information such as manufacturer-specific (M)SDSs, we are not and cannot be responsible for (M)SDSs obtained from any source other than ourselves. If you have obtained an (M)SDS from another source or if you are not sure that the (M)SDS you have is current, please contact us for the most current version.